



1. IC igniter
2. IC igniter 10-pin connector
3. Pickup coil 4-pin connector
4. Pickup coil for #2 and #3 cylinder
5. Pickup coil for #1 and #4 cylinder
6. Timing rotor
7. Ignition coil 9-pin connector
8. Ignition coil for #1 and #4 cylinders
9. Ignition coil for #2 and #3 cylinders
10. Spark Plugs

11. Engine stop switch 4-pin connector  
(US model: 6-pin connector)
12. Ignition switch 6-pin connector
13. Engine stop switch
14. Ignition switch
15. Junction Box
16. 30A fuse
17. Diodes
18. Junction box 4-pin connector
19. Headlight 6-pin connector

20. Battery
21. Side stand switch 3-pin connector
22. Side stand switch
23. LH switch 9-pin connector
24. Starter Lockout switch
25. Starter lockout switch
26. Junction box 18-pin connector
27. Neutral switch