


A
B
C
D
E
F
G
H
I
J
K

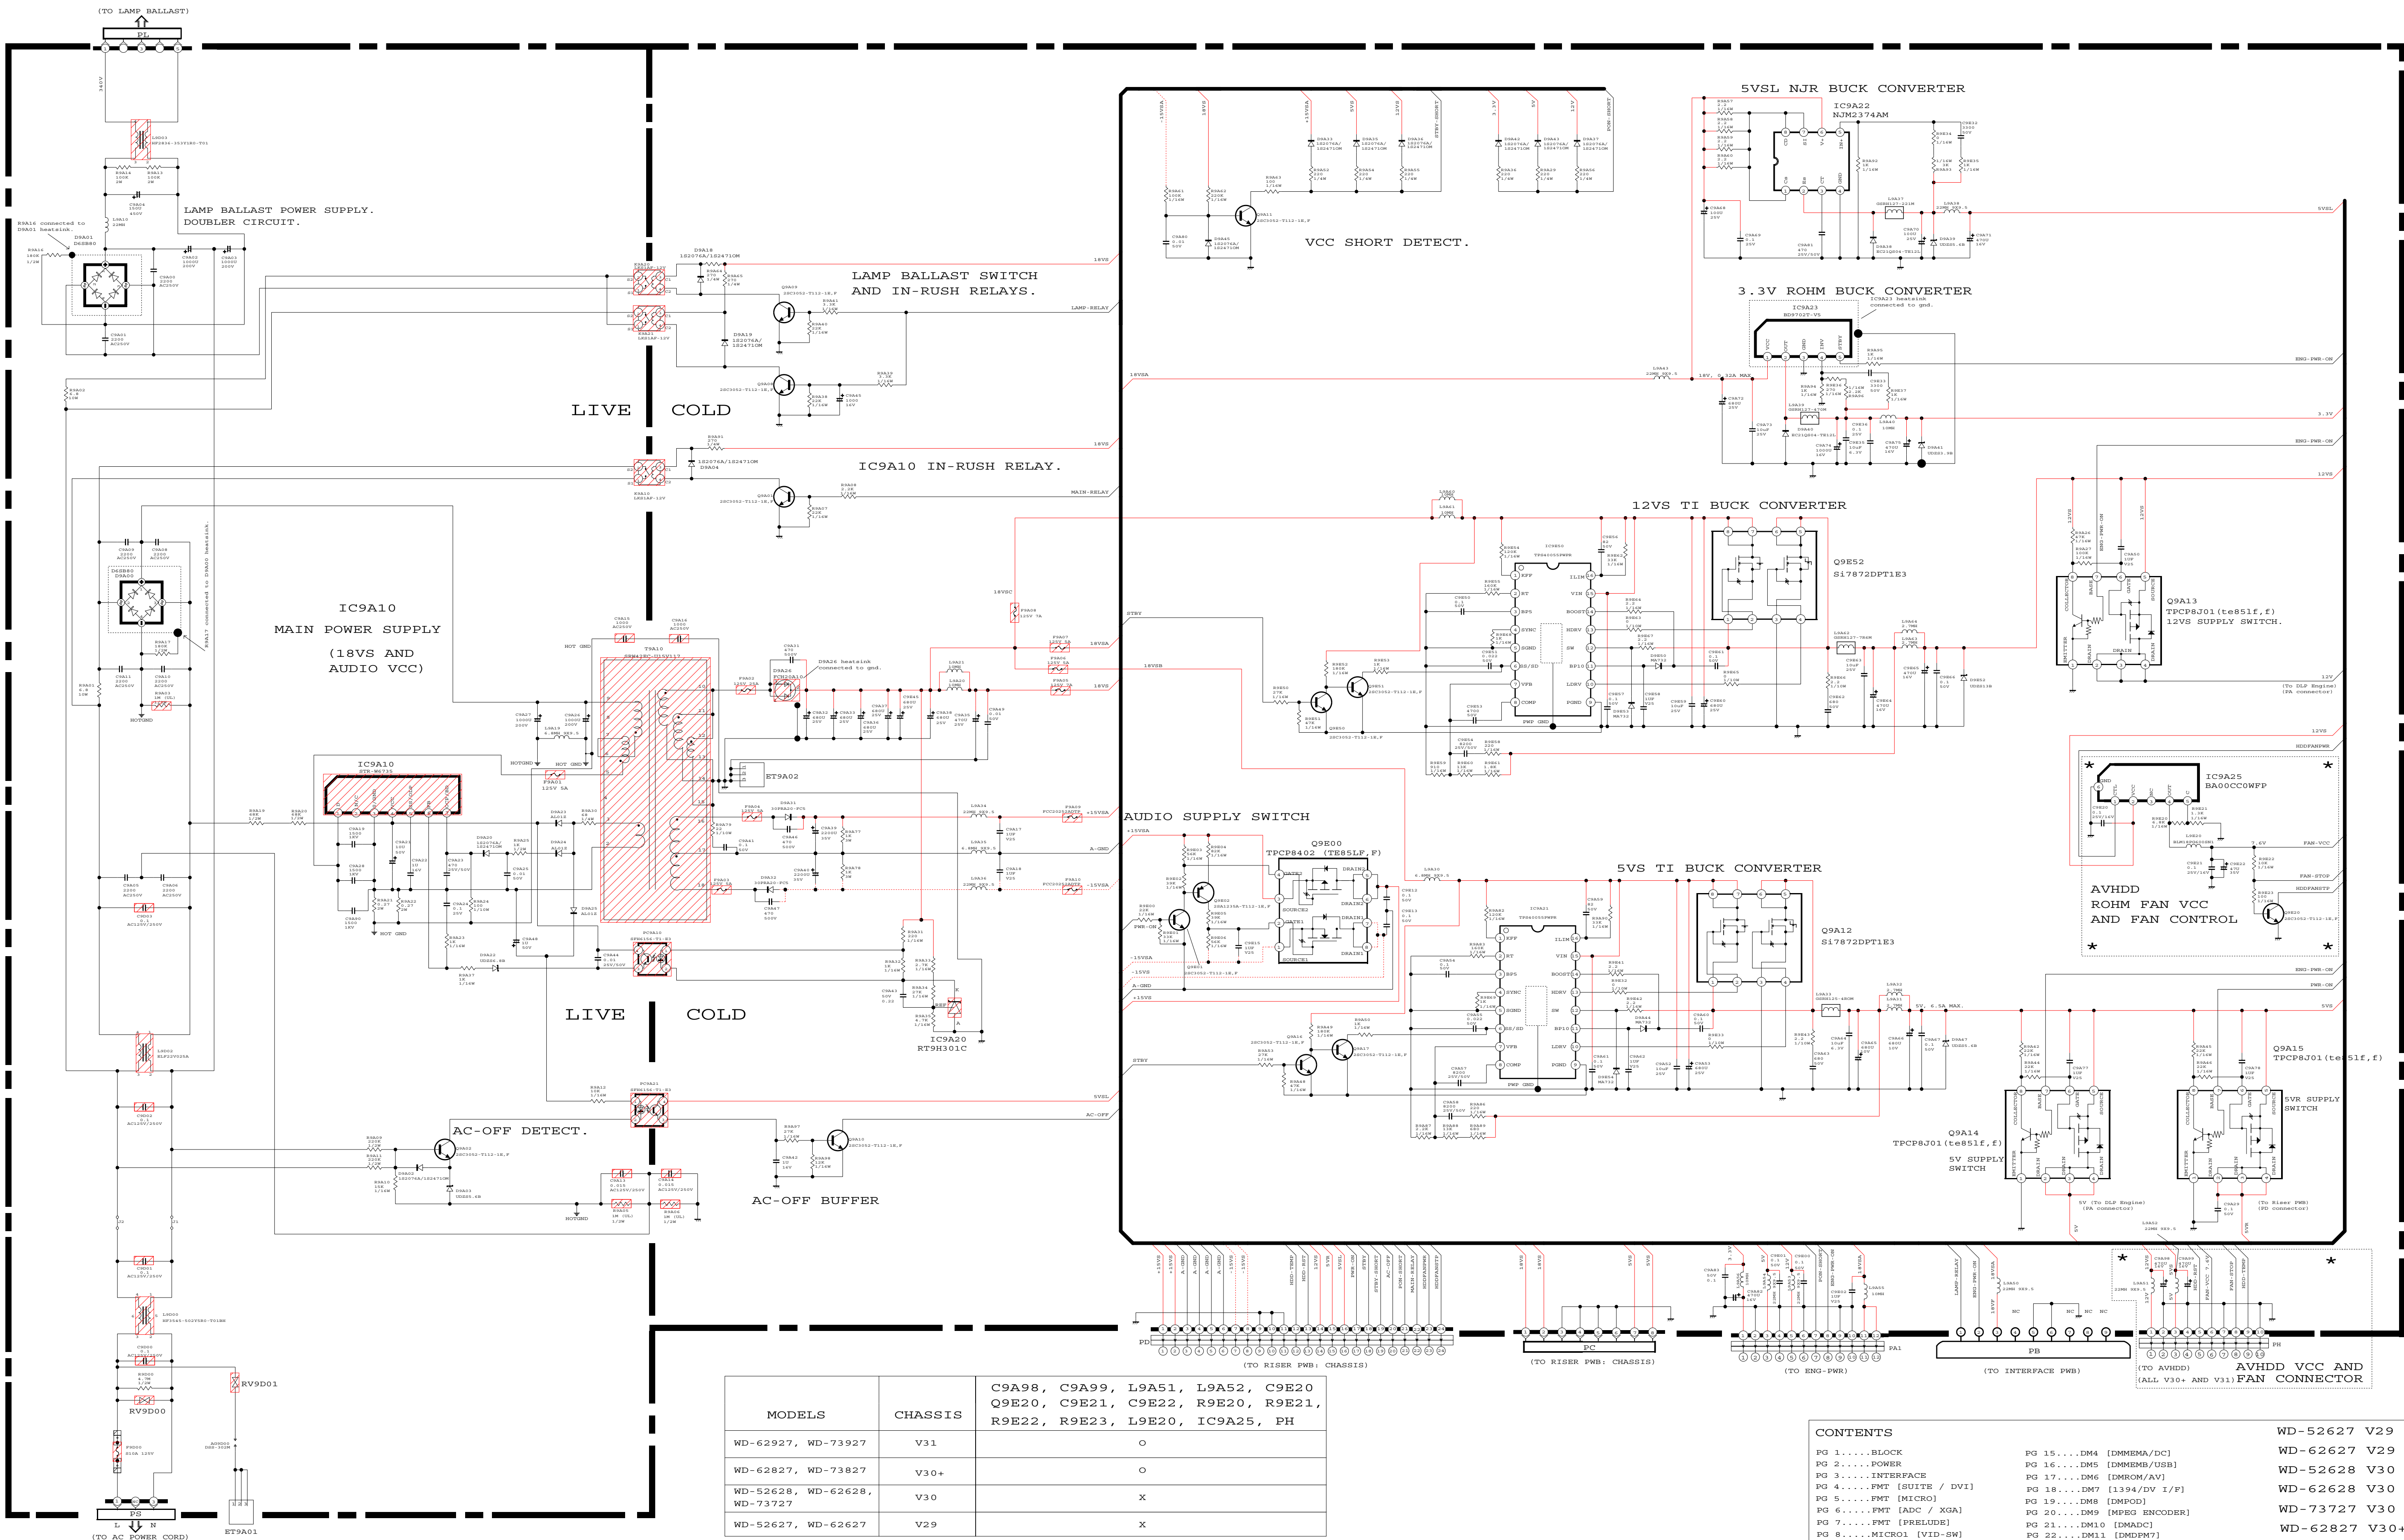

MODELS	CHASSIS	C9A98, C9A99, L9A51, L9A52, C9E20 Q9E20, C9E21, C9E22, R9E20, R9E21, R9E22, R9E23, L9E20, IC9A25, PH
WD-62927, WD-73927	V31	O
WD-62827, WD-73827	V30+	O
WD-52628, WD-62628, WD-73727	V30	X
WD-52627, WD-62627	V29	X

CONTENTS		WD-52627 V29
PG 1....BLOCK	PG 15....DM4 [DMMEMA/DC]	WD-62627 V29
PG 2....POWER	PG 16....DM5 [DMMEMB/USB]	WD-52628 V30
PG 3....INTERFACE	PG 17....DM6 [DMROM/AV]	WD-62628 V30
PG 4....FMT [SUITE / DVI]	PG 18....DM7 [1394/DV I/F]	WD-73727 V30
PG 5....FMT [MICRO]	PG 19....DM8 [DMPOD]	WD-62827 V30+
PG 6....FMT [ADC / XGA]	PG 20....DM9 [MPRG ENCODER]	WD-73827 V30+
PG 7....FMT [PRELUDE]	PG 21....DM10 [DMACI]	WD-62927 V31
PG 8....MICRO1 [VID-SW]	PG 22....DM11 [DMODP7]	WD-73927 V31
PG 9....MICRO2 [AUD-PIC]	PG 23....TERMINAL	
PG 10....MICRO3 [TV up]	PG 24....DEM0D1	
PG 11....MICRO4 [HDMI]	PG 25....DEM0D2	
PG 12....DM1 [ATSC/NTSC TUNER]	PG 26....RISER1	
PG 13....DM2 [DMDCDCI]	PG 27....RISER2	
PG 14....DM3 [DMCORE]	PG 28....E2P/FRONT/CONTROL/PREAMP ENGINE-POWER	