



'FAULT' LED will light if Strap Resistor is missing

'PASS' LED will light if LOOP continuity is OK.

SetUp: Place a known quality strap in the loop and adjust RV1 until the Green LED lights

Company Name		
Schematic Name		
esp1	Rev 1.1	Page # or name
	13/09/2008	