


Fig. 14

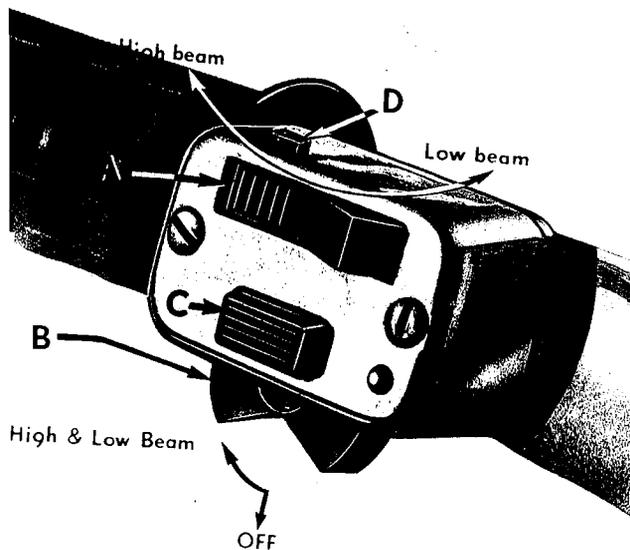

- a) High and low beam switch.
- b) Light switch.
- c) Horn button.
- d) Engine stop-button.

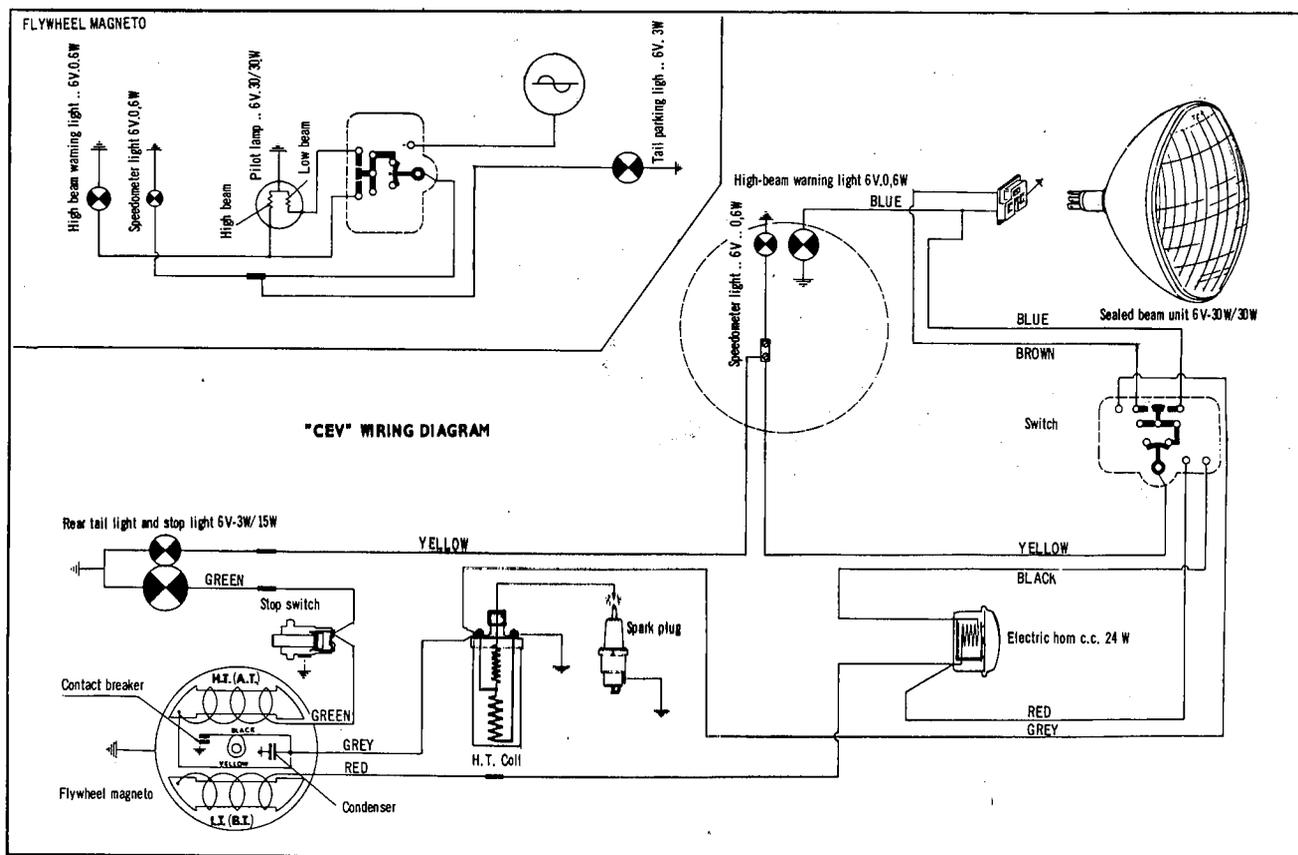


Fig. 15

**“ CAUTION ,,”**

At times, it may occur that when using the rear brake, the engine stops. This may be caused by:

- 1) The “Stop,, light bulb being burnt out, or missing.
- 2) The wire from the stop-light switch to the lamp-socket broken.

To have the engine working again replace the “Stop,, light bulb, or repair the wire.