

**SNSA TELECOMMUNICATIONS - 3750 VA INVERTER: SHEET 3 (DC-DC BOOST CONVERTER)**

NB


**Anode of D7 must be tied to COM pin only!!!**

**Keep Hi-Side Components Close to Hi Side. Same for Lo Side**

**Ground plane should NOT be under Hi-Side**

**Locate capacitors close as possible to associated pins**

**Place driver as close as possible to MOSFETS**

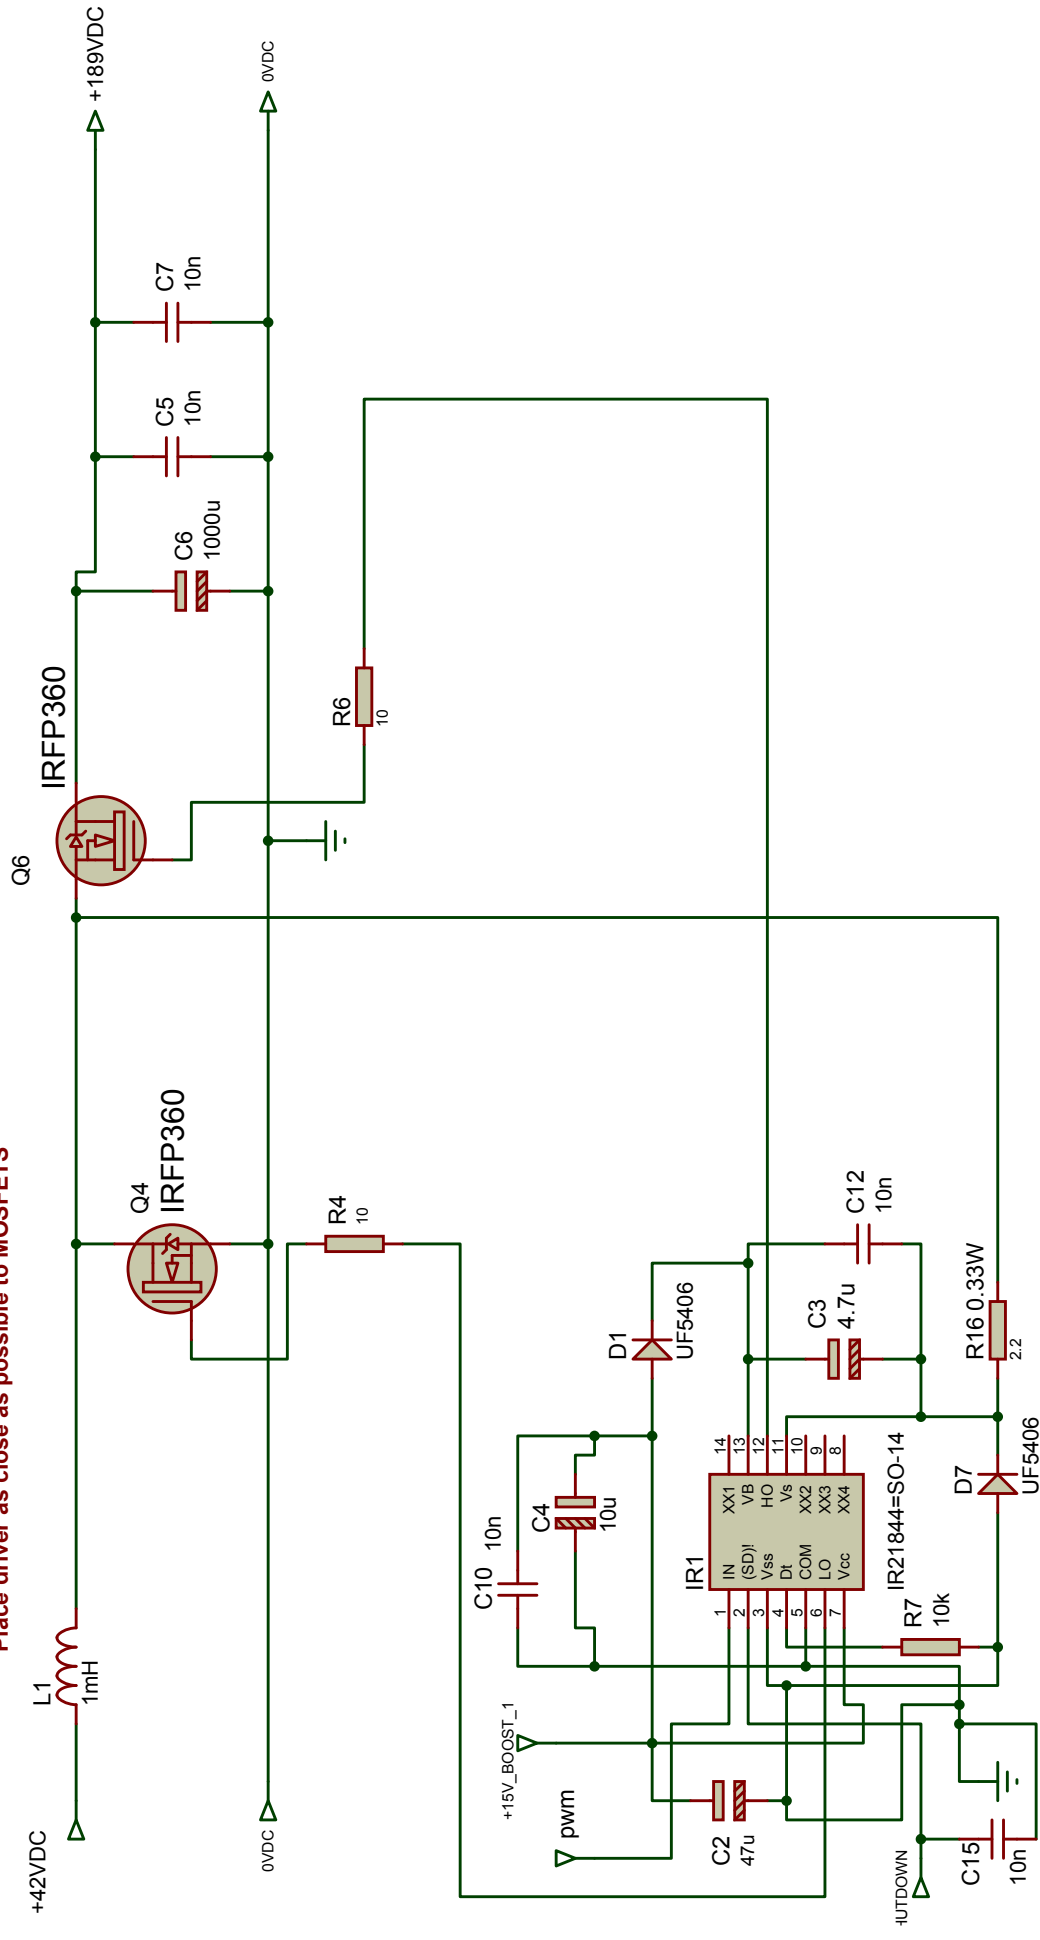

DC-DC Boost Converter: Continuation

