


Hbridge example

.tran 0 25mS 5mS

.step param Vbus list 350 450 param Vbus=380

.model SWFET SW(Ron=.001 Roff=10meg Vt=0.5 Vh=-0.5)

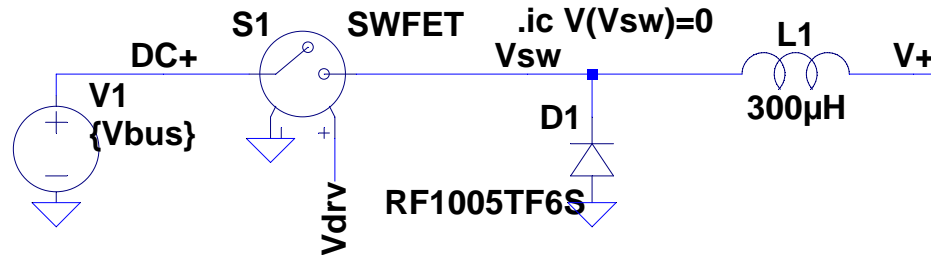

.model SWA SW(Ron=.1 Roff=10meg Vt=0.0001)

