


# Service Manual

**PIONEER®**  
The Art of Entertainment

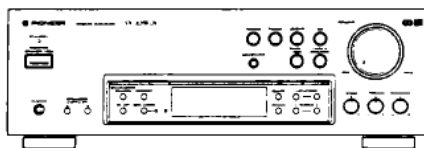

ORDER NO.  
**RRV1539**

**STEREO RECEIVER**

# SX-305RDS SX-205RDS

**THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).**

Type	Model		Power Requirement	Remarks
	SX-305RDS	SX-205RDS		
HYXK/EW	○	○	AC220-230V	
HYXK/GR	○	○	AC220-230V	
HVXK	—	○	AC230V	

## CONTENTS

1. EXPLODED VIEWS, PACKING AND PARTS LIST .....	2
2. SCHEMATIC AND PCB CONNECTION DIAGRAMS .....	8
3. PCB PARTS LIST .....	25
4. ADJUSTMENTS .....	30
5. IC INFORMATION .....	32
6. FL INFORMATION .....	33
7. BLOCK DIAGRAM .....	34
8. PANEL FACILITIES .....	35
9. SPECIFICATIONS .....	37

**PIONEER ELECTRONIC CORPORATION** 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153, Japan  
**PIONEER ELECTRONICS SERVICE, INC.** P.O. Box 1760, Long Beach, CA 90801-1760, U. S. A.  
**PIONEER ELECTRONIC (EUROPE) N.V.** Haven 1087 Keetberglaan 1, 9120 Melsele, Belgium  
**PIONEER ELECTRONICS ASIACENTRE PTE. LTD.** 501 Orchard Road, #10-00 Lane Crawford Place, Singapore 0923  
 © **PIONEER ELECTRONIC CORPORATION 1996**

T-SSG APR. 1996 Printed in Japan

# SX-305RDS, SX-205RDS

## 1. EXPLODED VIEWS, PACKING AND PARTS LIST

### NOTES:

- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
- The  $\Delta$  mark found on some component parts indicates the importance of the safety factor of the parts. Therefore, when replacing, be sure to use parts of identical designation.
- Parts marked by "⊙" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.

### 1.1 PACKING


#### ■ CONTRAST OF SX-305RDS/HYXK/EW, HYXK/GR, SX-205RDS/HYXK/EW, HYXK/GR AND HVXK

SX-305RDS/HYXK/EW, HYXK/GR, SX-205RDS/HYXK/EW, HYXK/GR and HVXK have the same construction except for the following:

Mark	No.	Symbol & Description	Part No.					Remarks
			SX-305RDS		SX-205RDS			
			HYXK/EW	HYXK/GR	HYXK/EW	HYXK/GR	HVXK	
	1	Packing case	AHD7270	AHD7270	AHD7266	AHD7266	AHD7266	
	7	Operating instructions (English/French/German/ Italian/Swedish/Spanish/ Portuguese)	ARE7062	Not used	ARE7062	Not Used	Not used	
	7	Operating instructions (German)	Not used	ARC7106	Not used	ARC7106	Not used	
	7	Operating instructions (English)	Not used	Not used	Not used	Not used	ARB7068	

#### ■ PARTS LIST FOR SX-305RDS/HYXK/EW

Mark	No.	Description	Parts No.
NSP	1	Packing case	AHD7270
	2	Front pad	AHA7115
	3	Rear pad	AHA7116
	4	Dry cell batteries (R6P, AA)	VEM-013
	5	Remote control unit (CU-SX109)	AXD7086
	6	Battery lid	AZA7123
	7	Operating instructions (English/French/German/ Italian/Dutch/Swedish/ Spanish/Portuguese)	ARE7062
	8	Loop antenna assy	ATB7006
	9	FM antenna	ADH7002
	10	Packing sheet	AHG1215
	11	Serial sheet (Warranty card and rear panel)	AAX1523
NSP	12	Warranty card	ARY7010

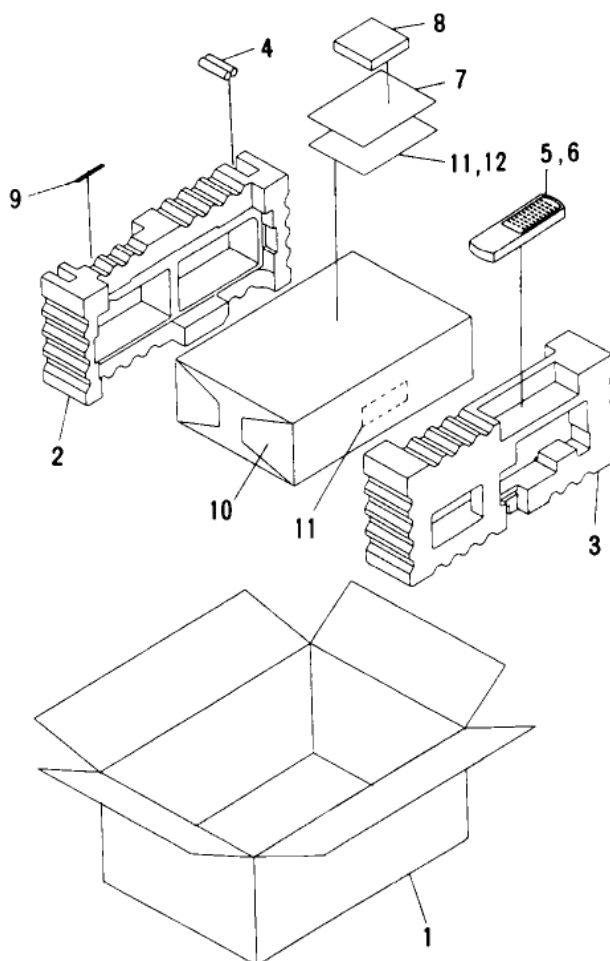

## 1.2 EXPLODED VIEWS (1/3)


### ■ CONTRAST OF SX-305RDS/HYXK/EW, HYXK/GR, SX-205RDS/HYXK/EW, HYXK/GR AND HVXK

SX-305RDS/HYXK/EW, HYXK/GR, SX-205RDS/HYXK/EW, HYXK/GR and HVXK have the same construction except for the following:

Mark	No.	Symbol & Description	Part No.					Remarks
			SX-305RDS		SX-205RDS			
			HYXK/EW	HYXK/GR	HYXK/EW	HYXK/GR	HVXK	
NSP	4 8	Front panel SP SW ASSY	AMB7335 AWZ8039	AMB7335 AWZ8039	AMB7332 AWZ8046	AMB7332 AWZ8046	AMB7332 AWZ8046	

### ■ PARTS LIST FOR SX-305RDS

Mark	No.	Description	Parts No.	Mark	No.	Description	Parts No.
	1	Bonnet case	ANE7121		9	Screw	ABA7009
	2	Screw	BCZ30P080FZK		10	Push button	AAD7283
	3	Screw	BBZ30P080FZK		11	Hinge button A	AAD7279
	4	Front panel	AMB7335		12	POWER SW ASSY	AWZ8038
	5	Screw	BPZ26P080FMC	NSP	13	Function button	AAD7281
	6	Panel holder	ANG7087		14	Hinge button B	AAD7280
	7	LED lens	AAK2553		15	FRONT ASSY	AWZ8036
NSP	8	SP SW ASSY	AWZ8039		16	Screw	IPZ26P080FMC

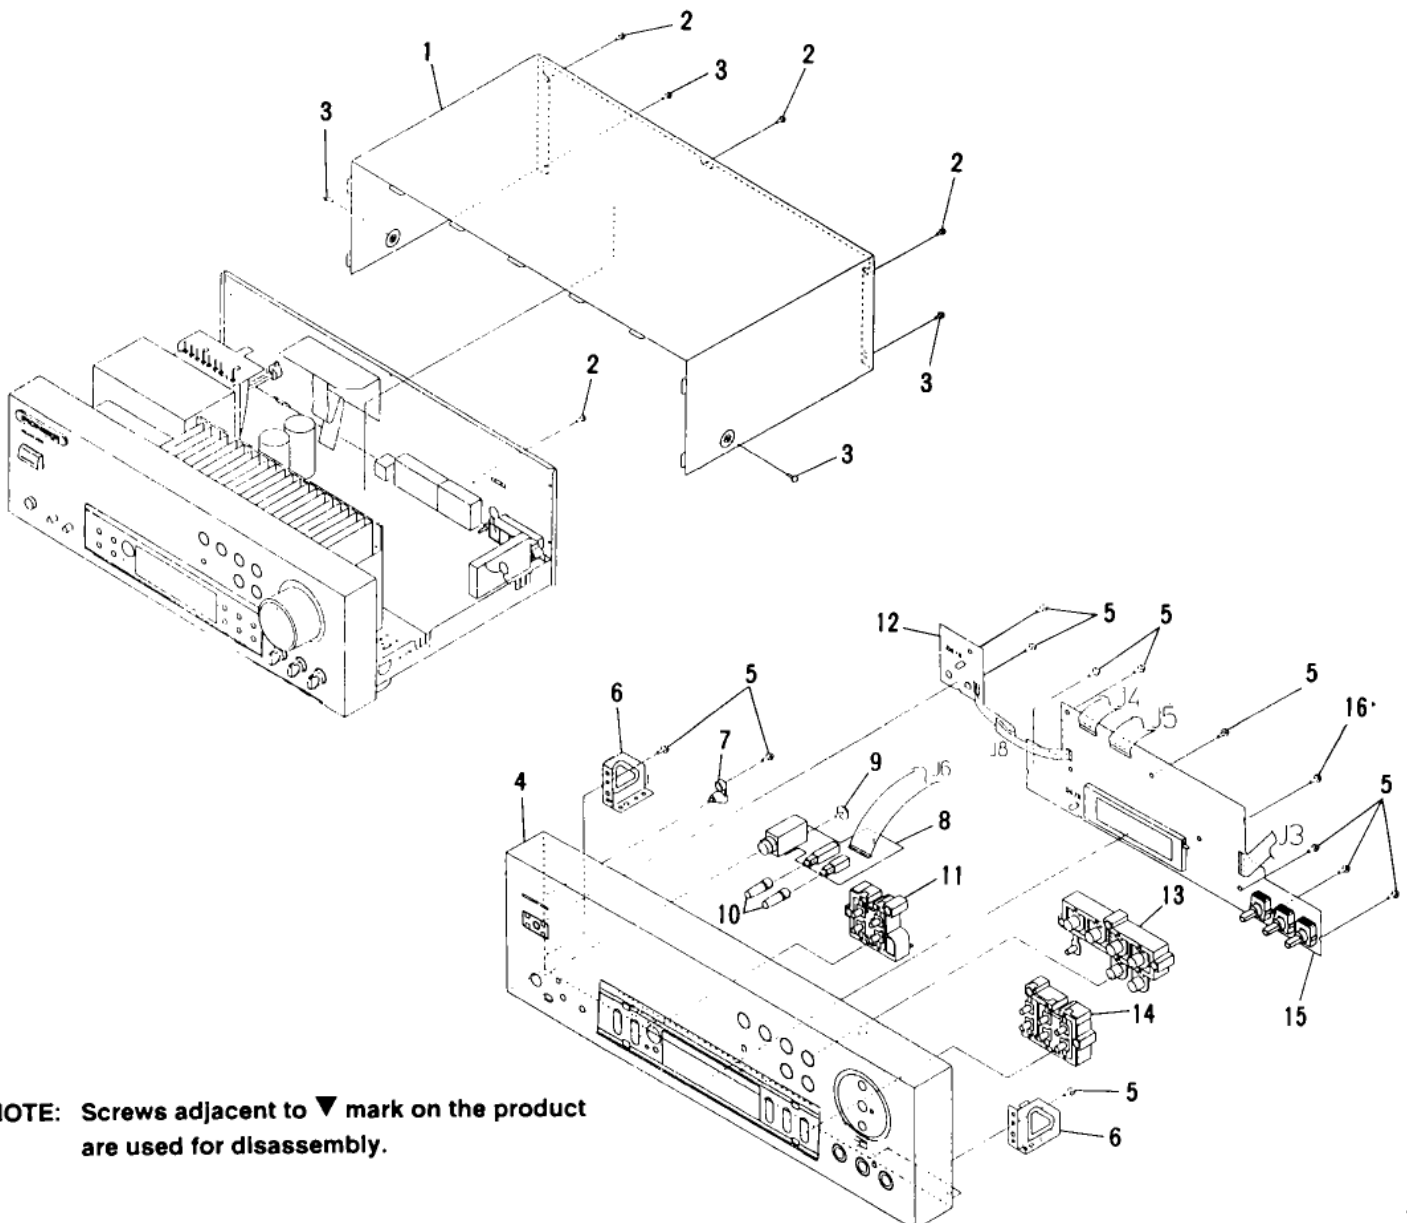

**NOTE:** Screws adjacent to ▼ mark on the product are used for disassembly.

# SX-305RDS, SX-205RDS

## 1.3 EXPLODED VIEWS (2/3)

### ■ CONTRAST OF SX-305RDS/HYXK/EW, HYXK/GR, SX-205RDS/HYXK/EW, HYXK/GR AND HVXK


SX-305RDS/HYXK/EW, HYXK/GR, SX-205RDS/HYXK/EW, HYXK/GR and HVXK have the same construction except for the following:

Mark	No.	Symbol & Description	Part No.					Remarks
			SX-305RDS		SX-205RDS			
			HYXK/EW	HYXK/GR	HYXK/EW	HYXK/GR	HVXK	
△	5	Rear panel	ANC7343	ANC7343	ANC7345	ANC7345	ANC7357	For AC power cord
	7	MOTHER ASSY	AWZ8035	AWZ8035	AWZ8042	AWZ8042	AWZ8042	
	12	Fuse card (T2.5AL250V)	AAX7035	AAX7035	Not used	Not used	Not used	
	13	Fuse (FU1, T2.5AL250V)	AEK1058	AEK1058	Not used	Not used	Not used	
△	13	Fuse (FU1, T1.25AL250V)	Not used	Not used	AEK1055	AEK1055	AEK1055	
△	15	Power transformer (AC220-230V)	ATS7120	ATS7120	ATS7121	ATS7121	ATS7121	
△	19	AC power cord	ADG1138	ADG1138	ADG1138	ADG1138	ADG1148	
△	23	Fuse (T5A/250V)	Not used	Not used	Not used	Not used	AEK1046	

### ■ PARTS LIST FOR SX-305RDS

Mark	No.	Description	Parts No.
NSP	1	Chassis	ANA1481
	2	Insulator	PNW1912
	3	Screw	BBZ30P080FZK
	4	PCB mold	AMR2533
	5	Rear panel	ANC7343
	6	Screw	BBZ30P080FZK
	7	MOTHER ASSY	AWZ8035
	8	PCB support	AEC1581
	9	Screw	ABA1047
	10	Screw	BBZ30P200FMC
NSP	11	Binder	RNE1277
	12	Fuse card	AAX7035
△	13	Fuse (FU1, T2.5AL250V)	AEK1058
△	14	Fuse (FU2, FU3, T800mAL250V)	AEK1053
△	15	Power transformer (T1) (T1 AC220-230V)	ATS7120
	16	Screw	ABA7019
NSP	17	PRIMARY ASSY	AWZ8391
NSP	18	TRANS ASSY	AWZ8040
△	19	AC power cord	ADG1138
	20	Strain relief	CM-22B
△	21	Main power switch	ASH-501
	22	Screw	BCZ30P080FZK

**Exploded Views (2/3)**

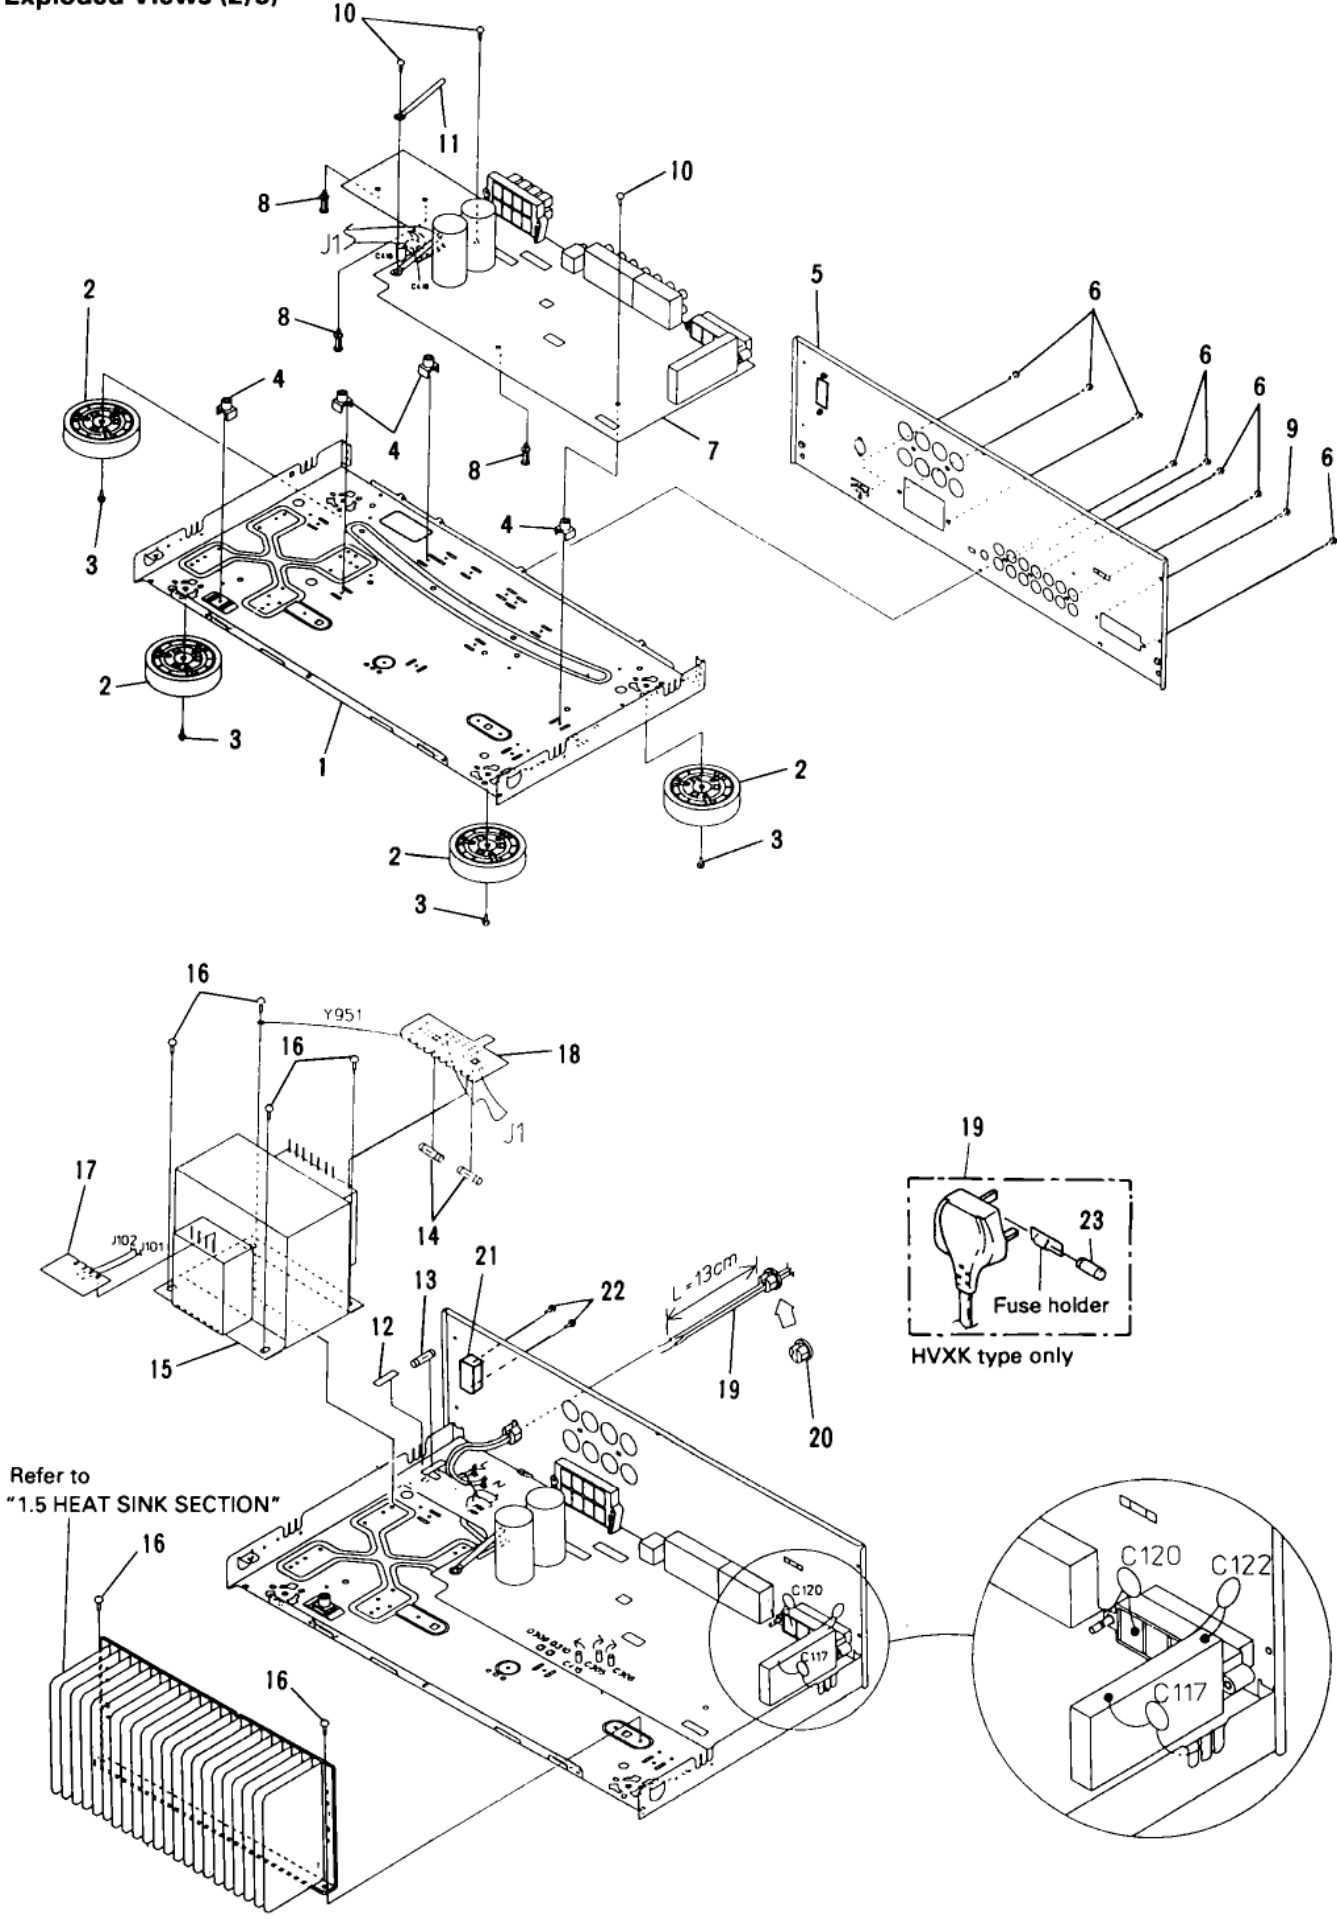



# SX-305RDS, SX-205RDS

## 1.4 EXPLODED VIEWS (3/3)


### ■ CONTRAST OF SX-305RDS/HYXK/EW, HYXK/GR, SX-205RDS/HYXK/EW, HYXK/GR AND HVXK

SX-305RDS/HYXK/EW, HYXK/GR, SX-205RDS/HYXK/EW, HYXK/GR and HVXK have the same construction except for the following:

Mark	No.	Symbol & Description	Part No.					Remarks
			SX-305RDS		SX-205RDS			
			HYXK/EW	HYXK/GR	HYXK/EW	HYXK/GR	HVXK	
NSP	5	SP ASSY	AWZ8041	AWZ8041	Not used	Not used	Not Used	
	6	Screw	ABA1007	ABA1007	Not used	Not used	Not used	

### ■ PARTS LIST FOR SX-305RDS

Mark	No.	Description	Parts No.
	1	VOLUME ASSY	AWZ8037
	2	Screw	BBZ30P080FZK
	3	Screw	BBZ30P200FMC
NSP	4	Binder	ZCA-BK1
NSP	5	SP ASSY	AWZ8041
	6	Screw	ABA1007
	7	Badge	PAM1608
	8	FL panel	AAK7240
	9	Round knob L	AAB7082
	10	Round knob S	AAB7083
	11	Power button	AAD2531

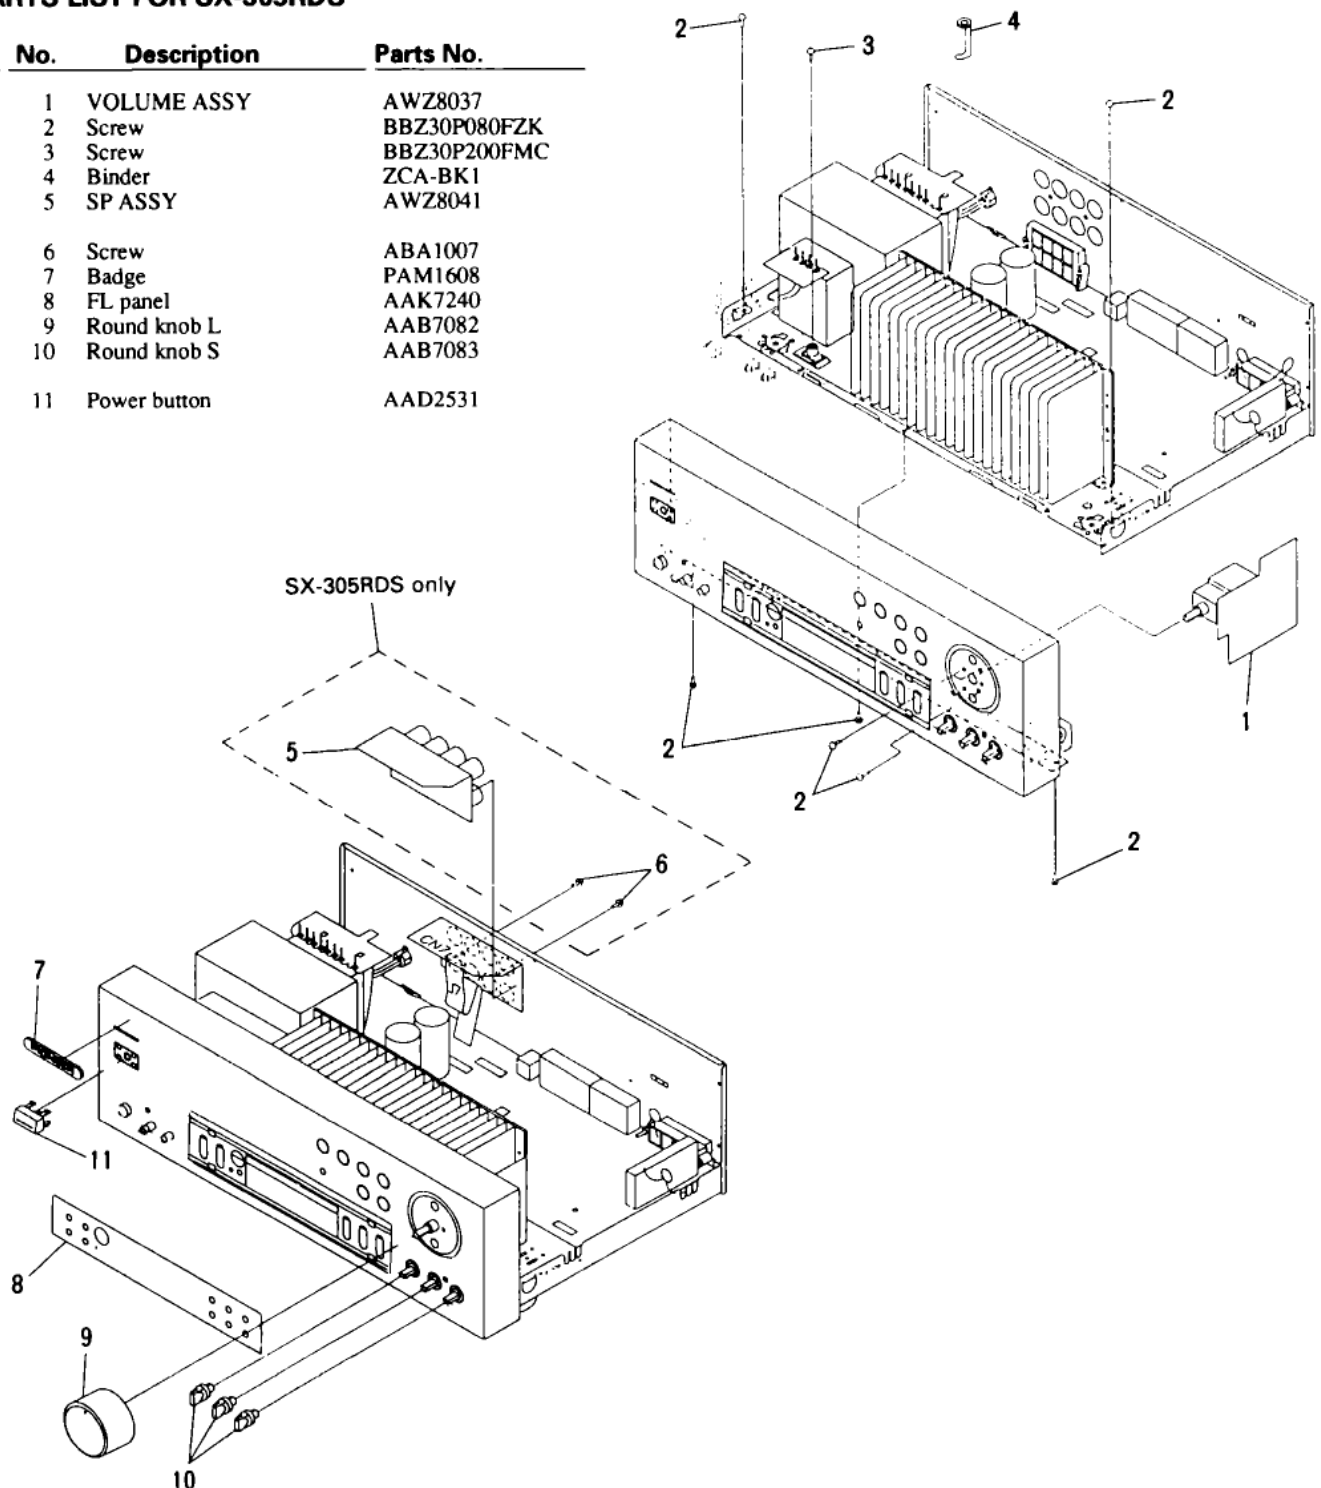

1.5 HEAT SINK SECTION


■ CONTRAST OF SX-305RDS/HYXX/EW, HYXX/GR, SX-205RDS/HYXX/EW, HYXX/GR AND HYXX

SX-305RDS/HYXX/EW, HYXX/GR, SX-205RDS/HYXX/EW, HYXX/GR and HYXX have the same construction except for the following:

Mark	No.	Symbol & Description	Part No.				Remarks
			SX-305RDS	HYXX/GR	SX-205RDS	HYXX	
NSP	1	Heat sink	ANH1475	ANH1475	ANH1476	ANH1476	
	3	Transistor (Q1, Q2)	2SC5198(P)	2SC5198(P)	2SC5198(P)	2SC5198(P)	
Δ	4	Transistor (Q3, Q4)	2SA1941(P)	2SA1941(P)	2SA1939(P)	2SA1939(P)	

■ PARTS LIST FOR SX-305RDS

Mark	No.	Description	Part No.
NSP	1	Heat sink	ANH1475
Δ	2	Mica washer	AEF7100
	3	Transistor (Q1, Q2)	2SC5198
	4	Transistor (Q3, Q4)	2SA1941
NSP	5	Screw	AMN1194
	6	REG ASSY	AWZ8389
	7	Screw	BAV280R7XK

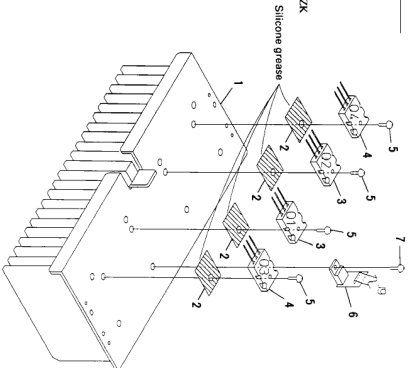

2. SCHEMATIC AND PCB CONNECTION DIAGRAMS

2.1 OVERALL SCHEMATIC DIAGRAM

NOTE FOR SCHEMATIC DIAGRAMS

(Type 2A)

1. When ordering service parts, be sure to refer to PARTS LIST OF EXPLODED VIEWS or "PCB PARTS LIST".

2. Since these are basic circuits, some parts of them or the values of some components may be changed for improvement.

3. RESISTORS:

Unit: k Ω, M Ω or Ω unless otherwise noted  
Tolerance: (F) ±1%, (G) ±2%, (K) ±10%, (M) ±20% or 15%, unless otherwise noted  
Power: 1/4W, 1/8W, 1/10W, 1/16W unless otherwise noted

4. CAPACITORS:

Unit: pF or μF unless otherwise noted  
Polarized capacitor (P): voltage (V) unless otherwise noted

5. COILS:

Unit: mH or μH unless otherwise noted

6. VOLTAGE AND CURRENT:

~: AC voltage (V)  
-: mA or -: mA  
DC: current at no input signal unless otherwise noted

7. OTHERS:

• Measurement point  
• The Δ mark found on some component parts indicates the important parts for replacement. When replacing, be sure to use parts of identical designation.

• SCH-□ indicates the drawing number of the schematic diagram. (SCH stands for schematic diagram).

8. SWITCHES (Underline indicates switch position):

FRONT ASSY

S826: STATION+

S827: STATION-

S828: EQUIMODE

S829: TUNING+

S821: TUNING-

S823: PHONO

S824: TAPE/VIDEO

S825: MONITOR

S826: MEMORY

S827: CD

S828: LUNO

S829: CHARACTER

S822: RF ATT

S825: POWER STANDBY ON

S826: POWER SW ASSY

S827: REMOTE CONTROLS R.O.N./OFF

S828: REMOTE CONTROLS R.O.N./OFF

S829: REMOTE CONTROLS R.O.N./OFF

S830: REMOTE CONTROLS R.O.N./OFF

S831: REMOTE CONTROLS R.O.N./OFF

S832: REMOTE CONTROLS R.O.N./OFF

S833: REMOTE CONTROLS R.O.N./OFF

S834: REMOTE CONTROLS R.O.N./OFF

S835: REMOTE CONTROLS R.O.N./OFF

S836: REMOTE CONTROLS R.O.N./OFF

S837: REMOTE CONTROLS R.O.N./OFF

S838: REMOTE CONTROLS R.O.N./OFF

S839: REMOTE CONTROLS R.O.N./OFF

S840: REMOTE CONTROLS R.O.N./OFF

S841: REMOTE CONTROLS R.O.N./OFF

S842: REMOTE CONTROLS R.O.N./OFF

S843: REMOTE CONTROLS R.O.N./OFF

S844: REMOTE CONTROLS R.O.N./OFF


S845: REMOTE CONTROLS R.O.N./OFF


S846: REMOTE CONTROLS R.O.N./OFF

S847: REMOTE CONTROLS R.O.N./OFF

S848: REMOTE CONTROLS R.O.N./OFF

SCH-1  
OVERALL SCHEMATIC DIAGRAM

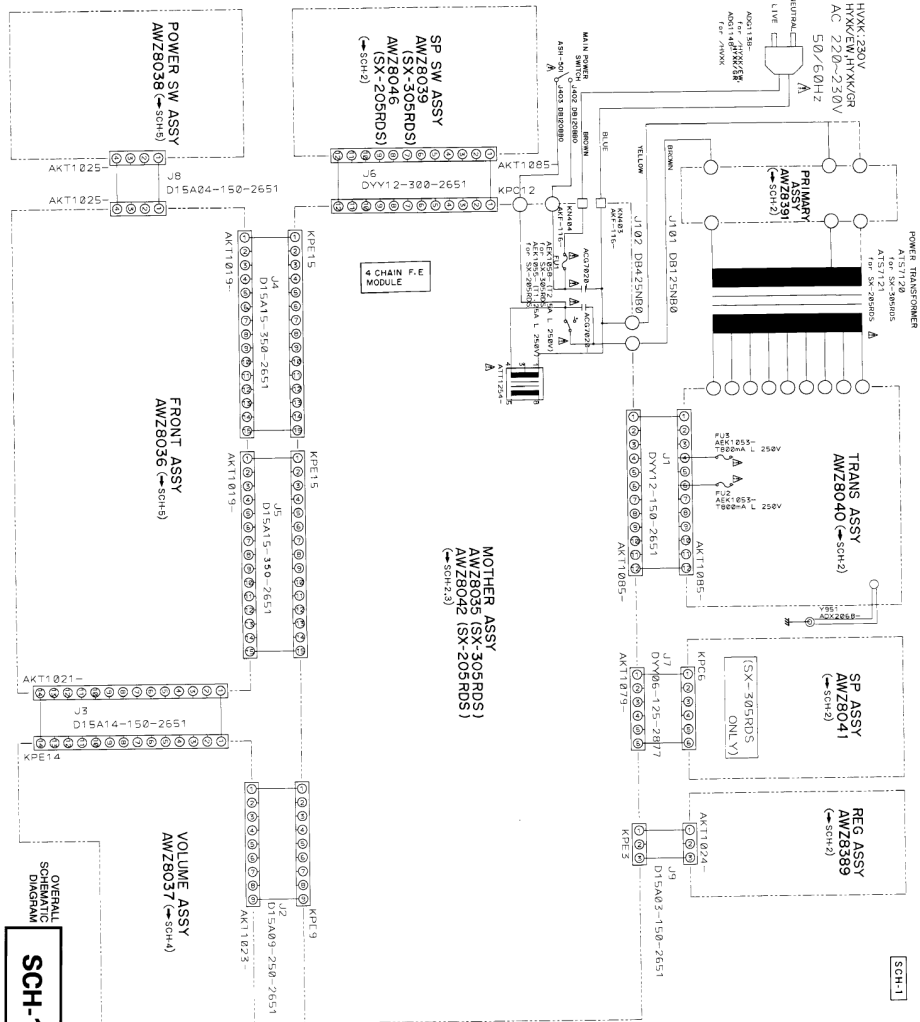

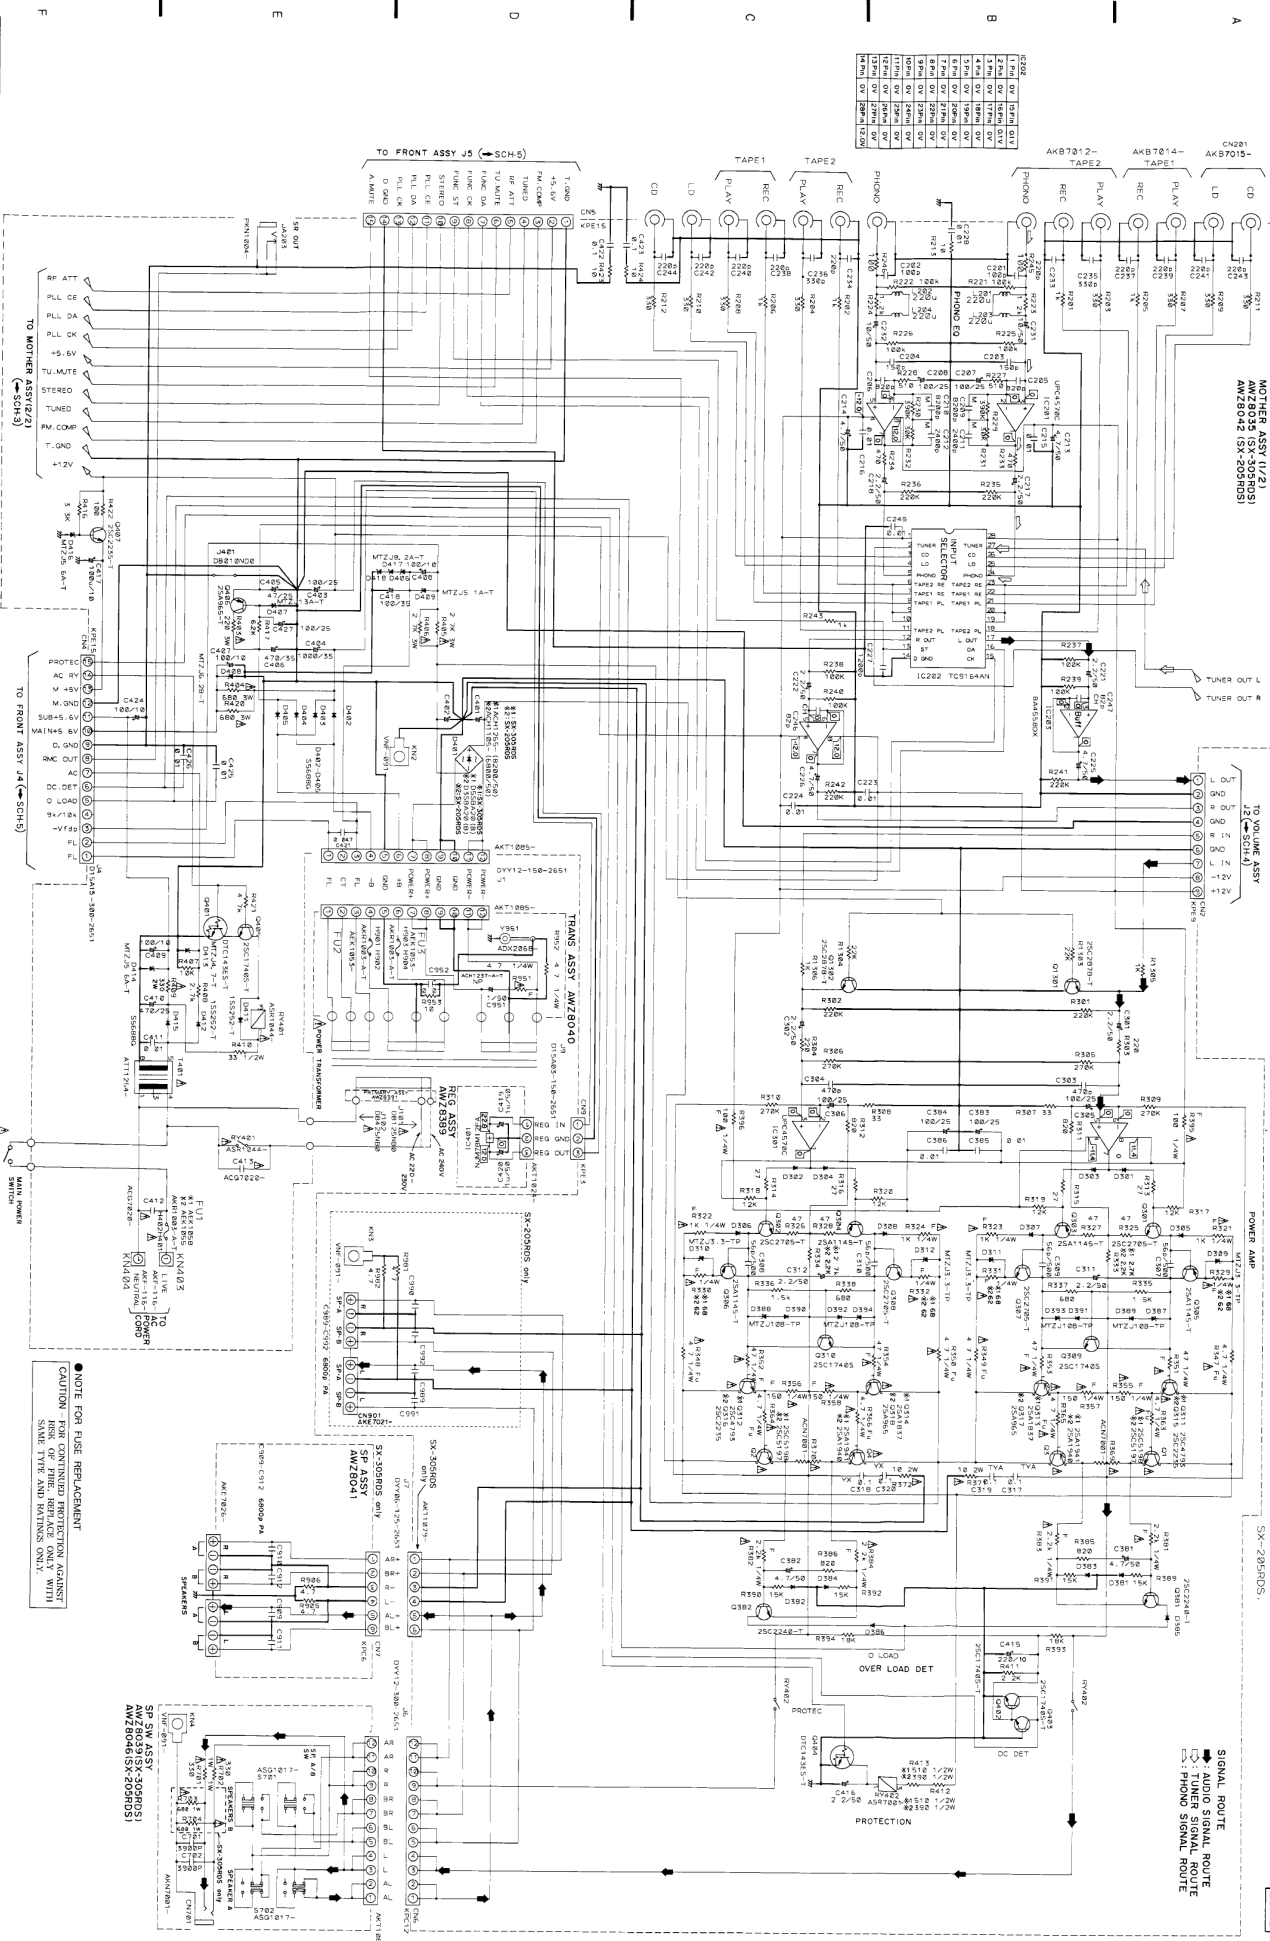

SCH-2

MOTHER ASSY (1/2)  
 REG. TRANS.  
 SP ASSY  
 SP SW ASSY











SCH-2

MOTHER ASSY (1/2)  
 REG. TRANS.  
 SP ASSY  
 SP SW ASSY




**NOTE FOR PCB DIAGRAMS:**

1. Part numbers in PCB diagrams match those in the schematic diagrams.
2. A comparison between the main parts of PCB and schematic diagrams is shown below.


Part Name	Symbol in Schematic Diagrams	Symbol in PCB Diagrams
Transistor		 B C E
Transistor with resistor		 B C E
Field effect transistor		 D G S
Resistor array		
3-terminal regulator		

- The parts mounted on this PCB include all necessary parts for several destinations. For further information for respective destinations, be sure to check with the schematic diagram.

- This diagram is viewed from the mounted parts side.

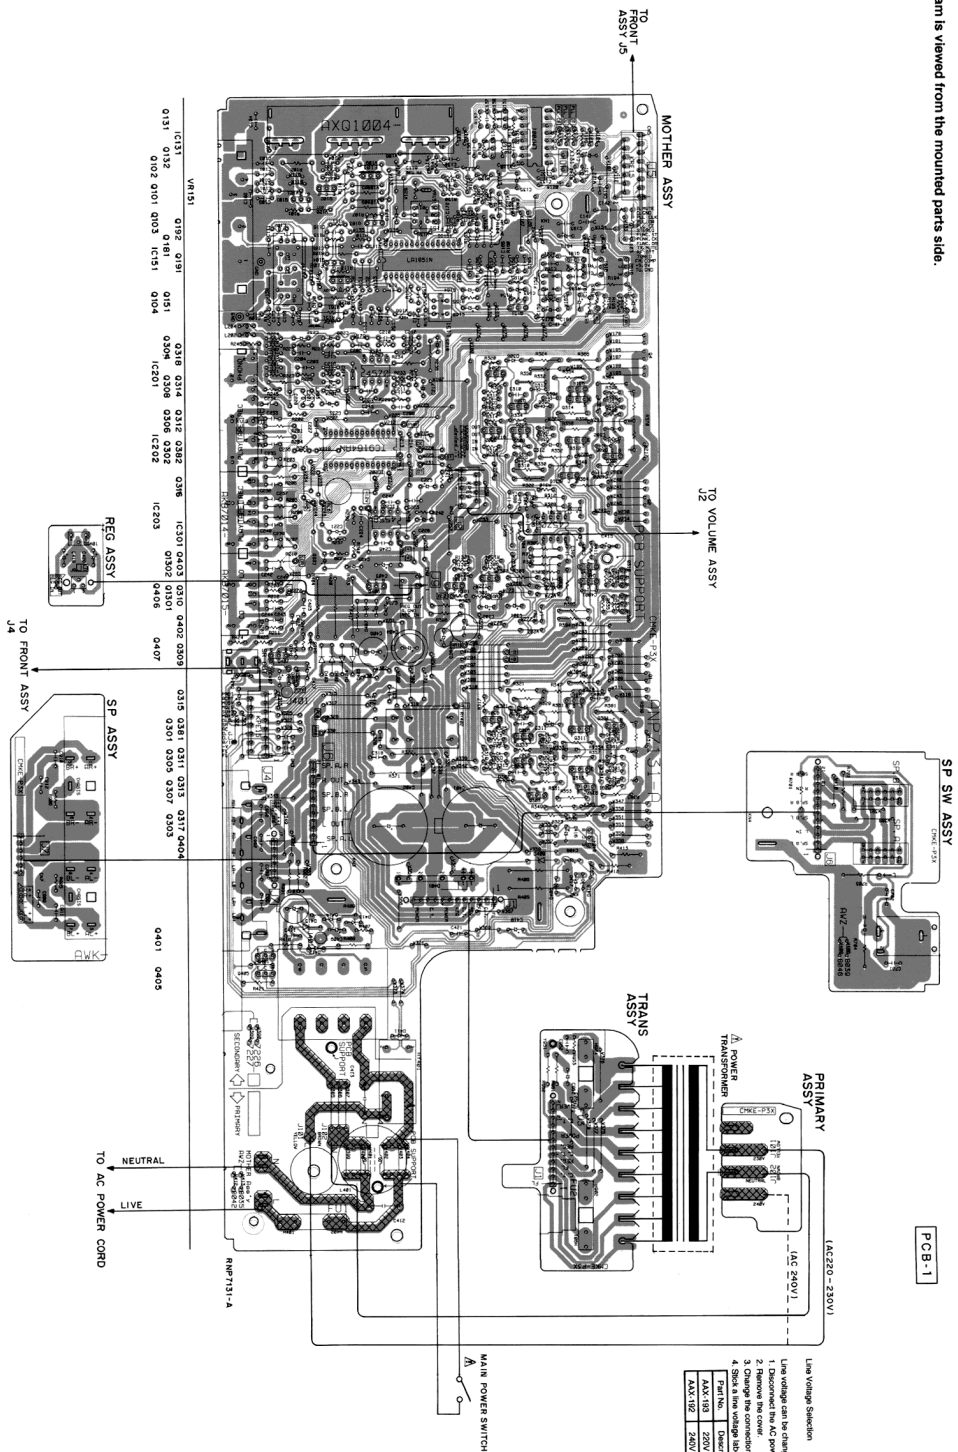

2.3 MOTHER ASSY (2/2)

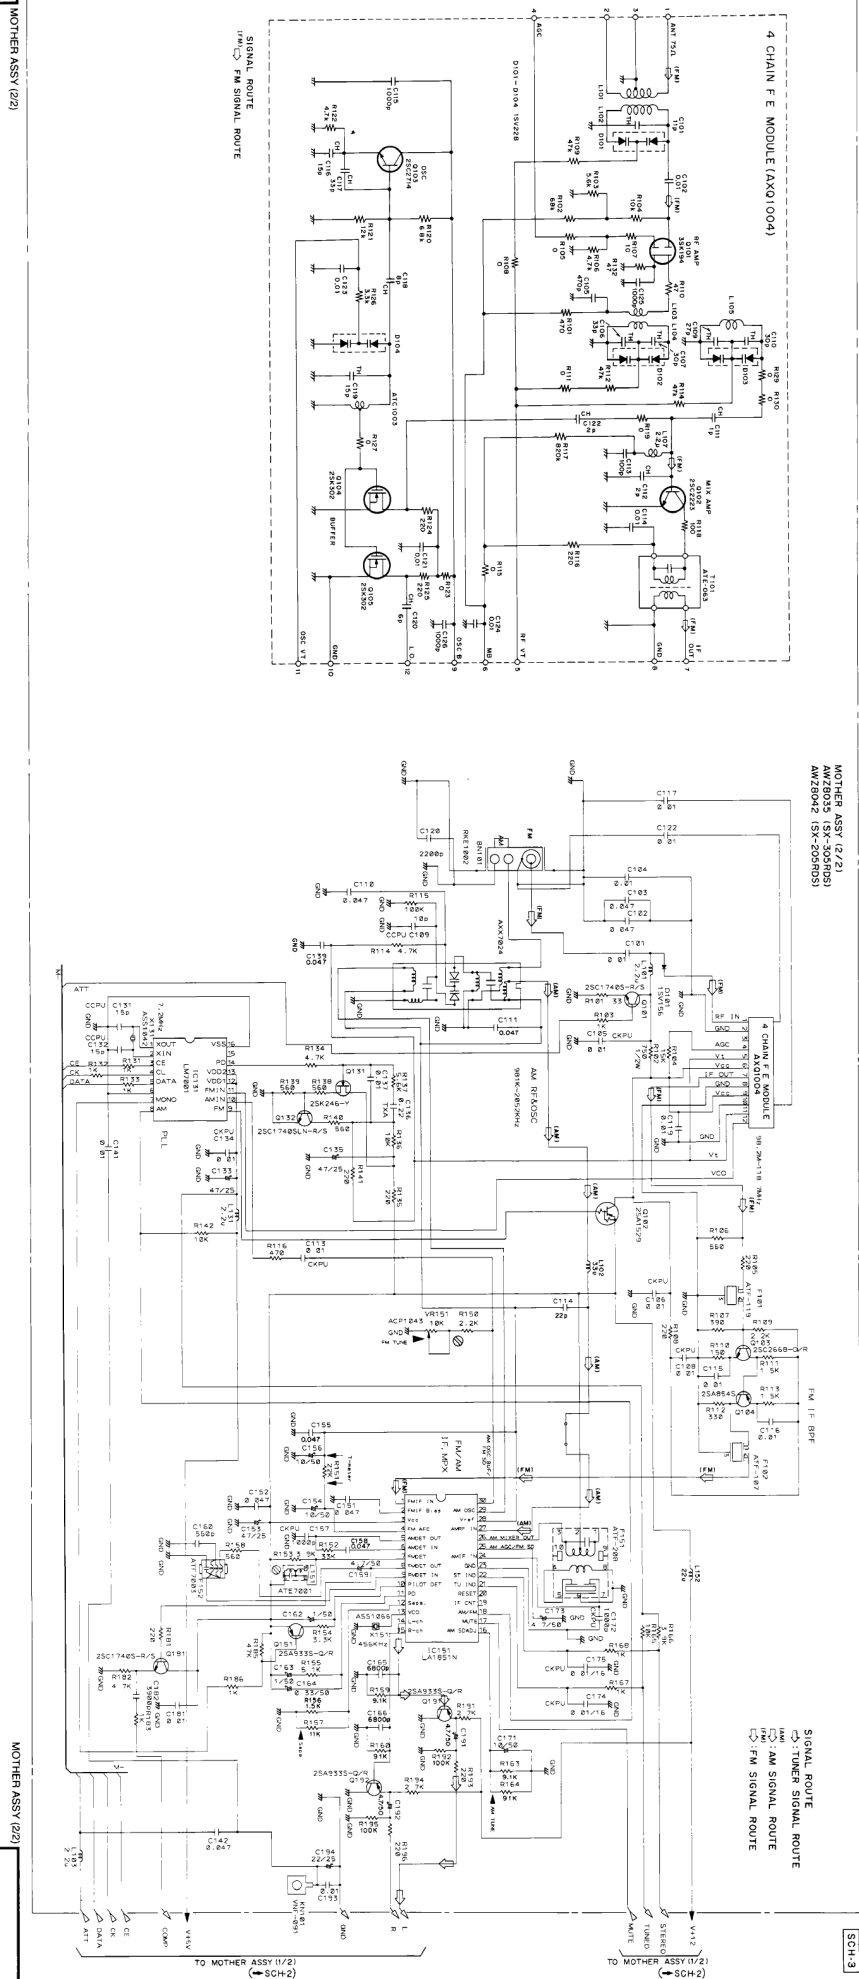


SCH-3

MOTHER ASSY (2/2)


SCH-3

MOTHER ASSY (2/2)

## 2.4 VOLUME ASSY

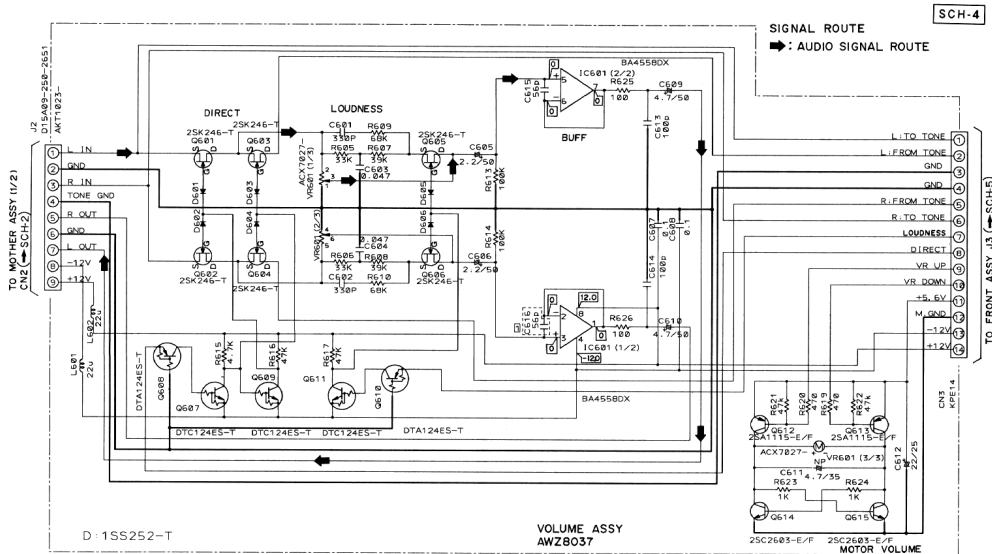

- This diagram is viewed from the mounted parts side.
- The parts mounted on this PCB include all necessary parts for several destinations. For further information for respective destinations, be sure to check with the schematic diagram.

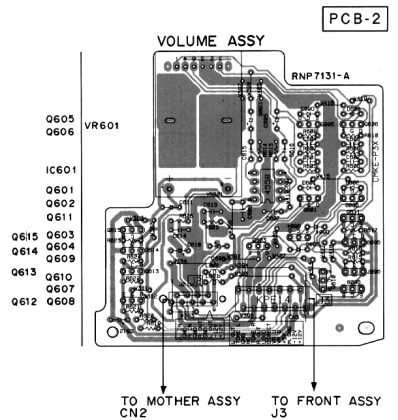

SCH-4

VOLUME ASSY

SCH-4


VOLUME ASSY

## 2.5 FRONT AND POWER SW ASSY



- This diagram is viewed from the mounted parts side.

- The parts mounted on this PCB include all necessary parts for several destinations. For further information for respective destinations, be sure to check with the schematic diagram.

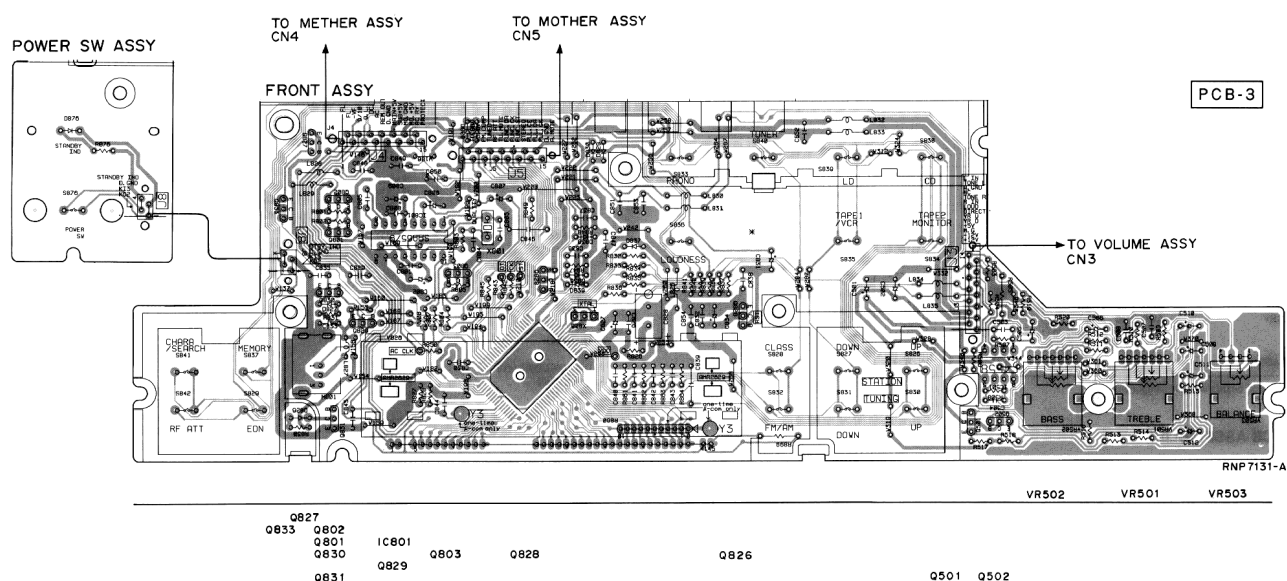



SX-305RDS, SX-205RDS

3. PCB PARTS LIST

NOTES:

- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
- The  $\Delta$  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Parts marked by "Q" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.
- When ordering resistors, first convert resistance values into code form as shown in the following examples.  
Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47K ohm (tolerance is shown by J=5%, and K=10%).  
560  $\Omega$   $\rightarrow$  56  $\times 10^1 \rightarrow$  561 .....RD1/4PU  $\begin{smallmatrix} 5 & 6 & 1 \\ \hline \end{smallmatrix}$  J  
47K  $\Omega$   $\rightarrow$  47  $\times 10^3 \rightarrow$  473 .....RD1/4PU  $\begin{smallmatrix} 4 & 7 & 3 \\ \hline \end{smallmatrix}$  J  
0.5  $\Omega$   $\rightarrow$  0R5 .....RN2H  $\begin{smallmatrix} 0 & 5 \\ \hline \end{smallmatrix}$  K  
1  $\Omega$   $\rightarrow$  1R0 .....RS1P  $\begin{smallmatrix} 1 & 0 & 0 \\ \hline \end{smallmatrix}$  K  
Ex.2 When there are 3 effective digits (such as in high precision metal film resistors)  
5.62 k $\Omega$   $\rightarrow$  562  $\times 10^1 \rightarrow$  5621 .....RN1/4PC  $\begin{smallmatrix} 5 & 6 & 2 & 1 \\ \hline \end{smallmatrix}$  F

■ LIST OF WHOLE PCB ASSEMBLIES

Mark	PCB Assemblies	Part No.					Remarks
		SX-305RDS		SX-205RDS			
		HYXK/EW	HYXK/GR	HYXK/EW	HYXK/GR	HVXK	
NSP	AF ASSY	AWK7226	AWK7226	AWK7227	AWK7227	AWK7227	*
	└ MOTHER ASSY	AWZ8035	AWZ8035	AWZ8042	AWZ8042	AWZ8042	
	└ 4 CHAIN F.E MODULE	AXQ1004	AXQ1004	AXQ1004	AXQ1004	AXQ1004	
	└ FRONT ASSY	AWZ8036	AWZ8036	AWZ8036	AWZ8036	AWZ8036	
	└ VOLUME ASSY	AWZ8037	AWZ8037	AWZ8037	AWZ8037	AWZ8037	
	└ POWER SW ASSY	AWZ8038	AWZ8038	AWZ8038	AWZ8038	AWZ8038	
	└ SP SW ASSY	AWZ8039	AWZ8039	AWZ8046	AWZ8046	AWZ8046	
	└ TRANS ASSY	AWZ8040	AWZ8040	AWZ8040	AWZ8040	AWZ8040	
	└ SP ASSY	AWZ8041	AWZ8041	Not Used	Not Used	Not Used	
	└ REG ASSY	AWZ8389	AWZ8389	AWZ8389	AWZ8389	AWZ8389	
	└ PRIMARY ASSY	AWZ8391	AWZ8391	AWZ8391	AWZ8391	AWZ8391	

\* : Assembly only for printed boards without component parts.

■ CONTRAST PCB ASSEMBLIES

MOTHER ASSY

AWZ8035 and AWZ8042 have the same construction except for the following:

Mark	Symbol & Description	Part No.		Remarks
		AWZ8035	AWZ8042	
$\Delta$	Q311, Q312	2SC4793	Not Used	
	Q313, Q314	2SA1837	Not Used	
	Q315, Q316	Not Used	2SC2235	
	Q317, Q318	Not Used	2SA965	
	D401	D5SBA20(B)	D3SBA20(B)	
	C401, C402	ACH1265 (8200 $\mu$ F/50V)	ACH1105 (6800 $\mu$ F/50V)	
	C989-C992	Not Used	CQPA682J100	
	R329-R332	RD1/4PMF680J	RD1/4PMF620J	
	R333, R334	RD1/6PMZ72J	RD1/4PU222J	
	R412, R413	RD1/2PM511J	RD1/2PM591J	
	R981, R982	Not Used	RD1/6PM4R7J	
	CN901	Not Used	AKE7021	
	6P CABLE HOLDER	AKT1079	Not Used	

SP SW ASSY

AWZ8039 and AWZ8046 have the same construction except for the following:

Mark	Symbol & Description	Part No.		Remarks
		AWZ8039	AWZ8046	
	R703, R704	RS1LMF681J	Not Used	

■ PARTS LIST FOR SX-305RDS

Mark	No.	Description	Parts No.	Mark	No.	Description	Parts No.
MOTHER ASSY					F152		ATF7003
SEMICONDUCTORS					L152		LAU220J
	IC203	BA4558DX			L201-L204		LAU221J
	IC151	LA1851N			L101, L103, L131		LAU2R2J
	IC131	LM7001J			L102		LAU330J
	IC202	TC9164AN		SWITCHES AND RELAYS			
	IC201, IC301	UPC4570C		$\Delta$	RY401		ASR1044
					RY402		ASR7001
$\Delta$	Q303-Q306	2SA1145		CAPACITORS			
$\Delta$	Q102	2SA1529		$\Delta$	C412, C413 (10000 $\mu$ F/250V)		ACG7030
	Q313, Q314	2SA1837			C401, C402 (8200 $\mu$ F/50V)		ACH1265
	Q104	2SA8545			C246, C247		CCCC8H2050
	Q151, Q191, Q192	2SA933S			C201, C202		CCCSL101J50
					C203, C204		CCCSL151J50
	Q406	2SA965			C114		CCCSL220J50
	Q101, Q181, Q309, Q310	2SC1740S			C233, C234, C237-C244		CCCSL221J50
	Q402, Q403, Q405	2SC1740SLN			C307-C310		CCCSL560K500
	Q132	2SC7235			C109		CCPUCH10050
	Q407				C131, C132		CCPUCH150J50
	Q381, Q382	2SC2240			C162, C163		CEAS1010M50
	Q103	2SC2668			C154, C156, C171, C231, C232		CEAS100M50
	Q301, Q302, Q307, Q308	2SC2705			C407-C409, C417, C424		CEAS101M10
$\Delta$	Q1301, Q1302	2SC2878			C207, C208, C305, C306		CEAS101M25
	Q311, Q312	2SC4793			C383, C384, C403, C427		CEAS101M25
	Q131	2SK346			C418		CEAS101M35
	Q401, Q404	DTC143ES			C404		CEAS102M35
	D301-D308, D381-D386	1SS252			C194		CEAS220M25
	D389-D392, D411, D412	1SS252			C415		CEAS221M10
	D101	1SV156			C217, C218, C221, C222		CEAS2R2M50
	D401	D5SBA20(B)			C301, C302, C311, C312, C416		CEAS2R2M50
	D387, D388, D393, D394	MTZ110B			C133, C135, C153, C405		CEAS470M25
	D407	MTZ113A			C410		CEAS471M25
	D309-D312	MTZ23.3			C406		CEAS471M35
	D413	MTZ24.7			C159, C173, C191, C192		CEAS4R7M50
	D409	MTZ25.1A			C213, C214, C225, C226		CEAS4R7M50
	D414, D416	MTZ25.6A			C381, C382		CEAS4R7M50
	D408	MTZ26.2B			C164		CEASR33M50
	D406, D417, D418	MTZ28.2A			C136		CFTXA224E90
	D402-D405, D415	SS688G			C317-C320		CFTYA104J50
COILS AND FILTERS					C101, C104, C115, C116, C119		CGCYX103M16
	X131 (7.200MHz)	ASS1042			C137, C141, C181, C193		CGCYX103M16
	X151 (456kHz)	ASS1066			C425, C426		CGCYX103M16
	L151	ATE1001			C422, C423		CGCYX104M16
	F102	ATF-107			C102, C103, C110, C111, C139		CGCYX473M16
	F101	ATF-119					
	F151	ATF-208					

Mark	No.	Description	Parts No.
	C151, C152, C155, C158		CGCYX473M16
	C227		CKCYB122K50
	C235, C236		CKCYB331K50
	C182		CKCYB392K50
	C303, C304		CKCYB471K50
	C160		CKCYB561K50
	C205, C206		CKCYB821K50
	C215, C216, C223, C224, C228		CKCYF103Z50
	C245, C385, C386, C411		CKCYF103Z50
	C421		CKCYF473Z50
▲	C120		CKDYB222K50
▲	C117, C122		CKDYX103M16
	C157, C172		CKPUYB102K50
	C142		CKPUYF473Z16
	C105, C106, C108, C113, C134		CKPUYY103M16
	C174, C175		CKPUYY103M16
	C211, C212		CQMA242J50
	C209, C210		CQMA822J50
	C165, C166		CQPA682J100

## RESISTORS

▲	R369, R370 (0.33Ω)	ACN7001
▲	R410	RD1/2PM330J
	R412, R413	RD1/2PM511J
	R417	RD1/2PM622J
	R102	RD1/2PM751J
▲	R395, R396	RD1/4PMF101J
▲	R321-R324	RD1/4PMF102J
▲	R355-R358	RD1/4PMF151J
▲	R381-R384	RD1/4PMF222J
▲	R351-R354	RD1/4PMF470J
▲	R329-R332	RD1/4PMF680J
	R213	RD1/6PM100J
	R245, R246, R422	RD1/6PM101J
	R103, R1305, R1306, R131-R133	RD1/6PM102J
	R167, R168, R183, R186	RD1/6PM102J
	R201, R202, R205, R206, R243	RD1/6PM102J
	R136, R142, R165, R407	RD1/6PM103J
	R115, R192, R195, R221, R222	RD1/6PM104J
	R225, R226, R237-R240	RD1/6PM104J
	R157	RD1/6PM113J
	R223, R224	RD1/6PM122J
	R317-R320	RD1/6PM123J
	R110	RD1/6PM151J
	R111, R113, R156, R335, R336	RD1/6PM152J
	R104, R389-R392	RD1/6PM153J
	R393, R394	RD1/6PM183J
	R105, R108, R135, R141, R181	RD1/6PM221J
	R193, R196, R303, R304	RD1/6PM221J
	R109, R150, R411	RD1/6PM222J
	R1303, R1304, R151	RD1/6PM223J
	R235, R236, R241, R242	RD1/6PM224J
	R301, R302	RD1/6PM224J
	R313-R316	RD1/6PM270J
	R191, R194, R333, R334, R408	RD1/6PM272J
	R305, R306, R309, R310	RD1/6PM274J

Mark	No.	Description	Parts No.
	R231, R232		RD1/6PM303J
	R101, R307, R308		RD1/6PM330J
	R112, R203, R204, R207-R212		RD1/6PM331J
	R154		RD1/6PM332J
	R152		RD1/6PM333J
	R107		RD1/6PM391J
	R153, R166		RD1/6PM392J
	R229, R230		RD1/6PM394J
	R325-R328		RD1/6PM470J
	R116, R233, R234		RD1/6PM471J
	R114, R134, R182, R421		RD1/6PM472J
	R185		RD1/6PM473J
	R227, R228		RD1/6PM511J
	R155		RD1/6PM512J
	R106, R138-R140, R158		RD1/6PM561J
	R137		RD1/6PM562J
	R337, R338		RD1/6PM681J
	R311, R312, R385, R386		RD1/6PM821J
	R159, R160, R163		RD1/6PM912J
	R164		RD1/6PM913J

▲	R347-R350, R363-R366	RFA1/4PS4R7J
▲	R371, R372	RS2LMF100J
▲	R409	RS2LMF331J
▲	R403	RS3LMF221J
▲	R405, R406	RS3LMF272J
▲	R404, R420	RS3LMF681J
	VR151 (10kΩ)	ACP1043
	Other Resistors	RD1/4PU□□□□

## OTHERS

	201	6P PIN JACK	AKB7012
	202	4P PIN JACK	AKB7014
	CN201	4P PIN JACK	AKB7015
	H401, H402	FUSE CLIP	AKR1003
		6P CABLE HOLDER	AKT1079
		12P CABLE HOLDER	AKT1085
▲	T401	POWER TRANSFORMER	ATT1254
	CN6	12P JUMPER CONNECTOR	KPC12
	CN4, CN5	15P JUMPER CONNECTOR	KPE15
	CN9	3P JUMPER CONNECTOR	KPE3
	CN2	9P JUMPER CONNECTOR	KPE9
	JA203	REMOTE CONTROL JACK 12V	PKN1004
	102	ANTENNA TERMINAL	RKE1002
	1, 2	EARTH METAL FITTING	VNF-091
	101	AM RF TUNING BLOCK	AXX7024

## 4 CHAIN F.E MODULE

4 CHAIN F.E MODULE has no service part.

## FRONT ASSY

## SEMICONDUCTORS

	IC501	BA4558DX
	IC826	PDG173A
	IC801	SAA6579
	Q801	2SA1115

# SX-305RDS, SX-205RDS

Mark	No.	Description	Parts No.
------	-----	-------------	-----------

	Q501, Q502, Q803		2SC1740S
	Q827, Q833		DTA124ES
	Q828, Q829		DTA143ES
	Q831		DTC124ES
	Q802, Q826, Q830		DTC143ES
	D827-D831, D836-D839		1SS252
	D826		AEL1065

## COILS AND FILTERS

	X826		ASS1055
	X801		ASS7004
	L827		LAU010J
	L828, L830, L831, L834, L835		LAU220J
	L826, L829, L832, L833		LAU2R2J

## SWITCHES AND RELAYS

	S826-S842		ASG1029
--	-----------	--	---------

## CAPACITORS

	C828		ACH1246
	C803		CCCCH470J50
	C804		CCCCH820J50
	C503, C504		CCCSL151J50
	C807, C834		CEAS010M50

	C501, C502, C505, C506		CEAS100M50
	C802, C809		CEAS101M10
	C827		CEAS221M10
	C806, C831		CEAS2R2M50
	C509, C510		CEASR47M50

	C507, C508		CFTXA153J50
	C511, C512, C844		CFTYA104J50
	C851-C854		CGCYX103M16
	C849, C850		CGCYX104M16
	C836-C838		CGCYX473M16

	C840-C843		CKCYB122K50
	C835		CKCYB331K50
	C805		CKCYB561K50
	C829, C845, C847, C848		CKCYF473Z50
	C839, C846		CKPUYF103Z25

	C801, C808, C826, C830		CKPUYY103M16
	C832, C833		CKPUYY103M16

## RESISTORS

	VR503 (500k $\Omega$ )		ACS7004
	VR501, VR502 (30k $\Omega$ )		ACS7005
	Other Resistors		RD1/6PM□□□J

## OTHERS

	V826	FL INDICATOR TUBE	AAV7026
--	------	-------------------	---------

## VOLUME ASSY

## SEMICONDUCTORS

	IC601		BA4558DX
	Q612, Q613		2SA1115
	Q614, Q615		2SC2603
	Q601-Q606		2SK246

Mark	No.	Description	Parts No.
------	-----	-------------	-----------

	Q608, Q610		DTA124ES
	Q607, Q609, Q611		DTC124ES
	D601-D606		1SS252

## COILS AND FILTERS

	L601, L602		LAU220J
--	------------	--	---------

## CAPACITORS

	C613, C614		CCCSL101J50
	C615, C616		CCCSL560K500
	C611		CEANP4R7M35
	C612		CEAS220M25
	C605, C606		CEAS2R2M50

	C609, C610		CEAS4R7M50
	C607, C608		CGCYX104M16
	C601, C602		CKCYB331K50
	C603, C604		CKCYF473Z50

## RESISTORS

	VR601 (100k $\Omega$ )		ACX7027
	Other Resistors		RD1/6PM□□□J

## OTHERS

	CN3	CABLE HOLDER 14P JUMPER CONNECTOR	AKT1023 KPE14
--	-----	--------------------------------------	------------------

## POWER SW ASSY

## SEMICONDUCTORS

	D876		BR3371XJ30A
--	------	--	-------------

## SWITCHES AND RELAYS

	S876		ASG1029
--	------	--	---------

## RESISTORS

	All Resistors		RD1/6PM□□□J
--	---------------	--	-------------

## SP SW ASSY

## SWITCHES AND RELAYS

	S701, S702		ASG1017
--	------------	--	---------

## CAPACITORS

	C701, C702		CKCYB392K50
--	------------	--	-------------

## RESISTORS

△	R701, R702		RS1LMF331J
△	R703, R704		RS1LMF681J

## OTHERS

	CN701	HEADPHONE JACK	AKN7001
	4	12P CABLE HOLDER	AKT1085
		EARTH METAL FITTING	VNF-091

## TRANS ASSY

## CAPACITORS

△	C951 (1 $\mu$ F/100V)		ACH1237
	C952		CKCYF103Z50

Mark	No.	Description	Parts No.
------	-----	-------------	-----------

**RESISTORS**

△	R951		RD1/4PMF4R7J
△	R953		RD1/4PU100J
△	R952		RD1/4PU4R7J

**OTHERS**

H901-H904	FUSE CLIP	AKR1003
	12P CABLE HOLDER	AKT1085

**SP ASSY****CAPACITORS**

C909-C912	CQPA682J100
-----------	-------------

**RESISTORS**

All Resistors	RD1/6PM□□□J
---------------	-------------

**OTHERS**

	8P SPEAKER TERMINAL	AKE7026
CN7	6P JUMPER CONNECTOR	KPC6

**REG ASSY****SEMICONDUCTORS**

IC401	NJM78M12FA
-------	------------

**CAPACITORS**

C419, C420	CEAS010M50
------------	------------

**PRIMARY ASSY**

PRIMARY ASSY has no service part.

## 4. ADJUSTMENTS


### ADJUSTMENT OF MW TUNER SECTION

- Set the FM/AM selector to AM (MW) BAND.
- Connect the wiring as shown in Fig. 1-1.

Step No.	Adjustment Title	AM SG (400Hz, 30% Mod.)		Reception Frequency Display	Adjustment Location	Specifications
		Frequency (kHz)	Level (dBμV/m)			
1	TUNED IND. Lighting Level Check	999	Less than 65	999 kHz	—	Less than 65 dBμV/m. In case out of standard, cut the R164.

### ADJUSTMENT OF FM TUNER SECTION

- Set the FM/AM selector to FM BAND.
- Connect the wiring as shown in Fig. 1-1.

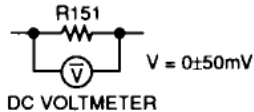Step No.	Adjustment Title	FM SG (1kHz, ±75kHz dev.)		Reception Frequency Display	Adjustment Location	Specifications
		Frequency (MHz)	Level (dBμV)			
1	Center Adjustment	98	60	98.0 MHz	L151	Adjust so that the DC voltage of R151's both ends becomes 0V±50mV. 
2	Front-end Sensitivity Check	98	Less than 14	98.0 MHz	—	Less than 14 dBμV.
3	Stereo Separation Check	89	60	89.0 MHz	—	Less than 23 dB. In case out of standard, cut the R157.
4	TUNED IND. Lighting Level	98	18 (±3 dB)	98.0 MHz	VR151	18 dBμV±3 dB. Adjust so that the indicator of TUNED IND. starts to light up.

Note:

- Make indicator adjustments in order of AM → FM.

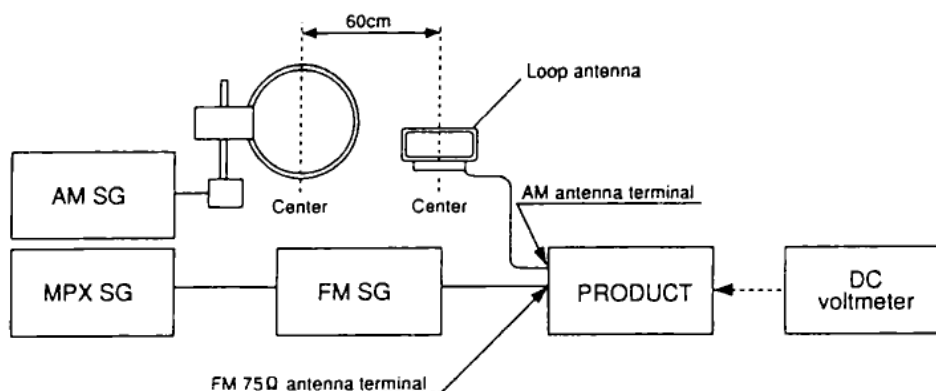


Fig. 1-1. AM and FM Adjustment Wiring Diagram



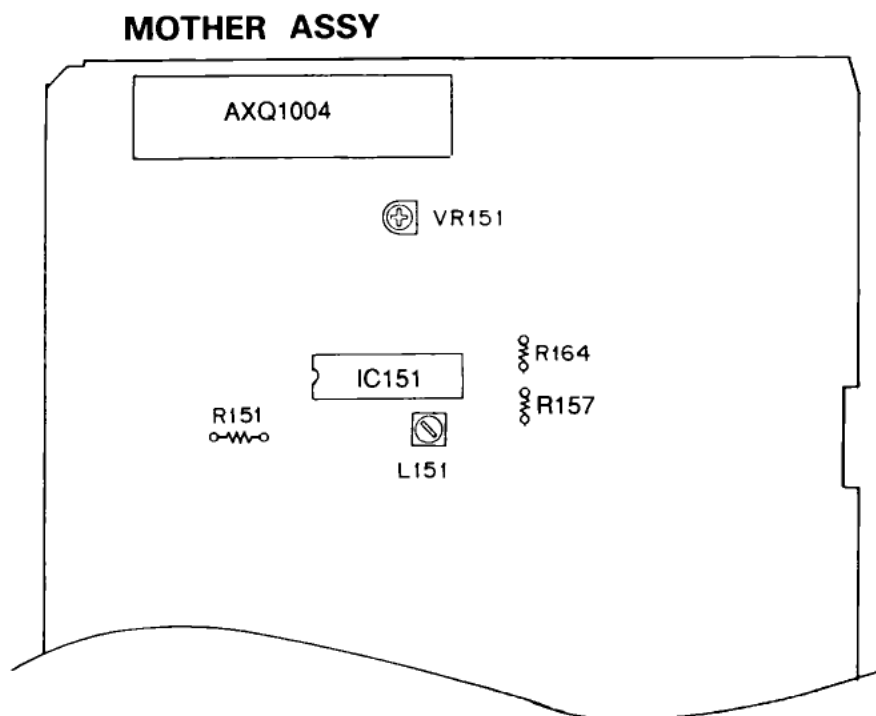


Fig. 1-2. Adjustment Points


## 5. IC INFORMATION

• The information shown in the list is basic information and may not correspond exactly to that shown in the schematic diagrams.

### ■ SAA6579 (FRONT ASSY: IC801) Radio data system demodulator (RDS), CMOS IC

The SAA6579 is a demodulator circuit for RDS applications. It contains a 57 kHz bandpass filter and a digital demodulator to regenerate the RDS data stream out of the multiplex signal (MPX).

#### ● Block Diagram

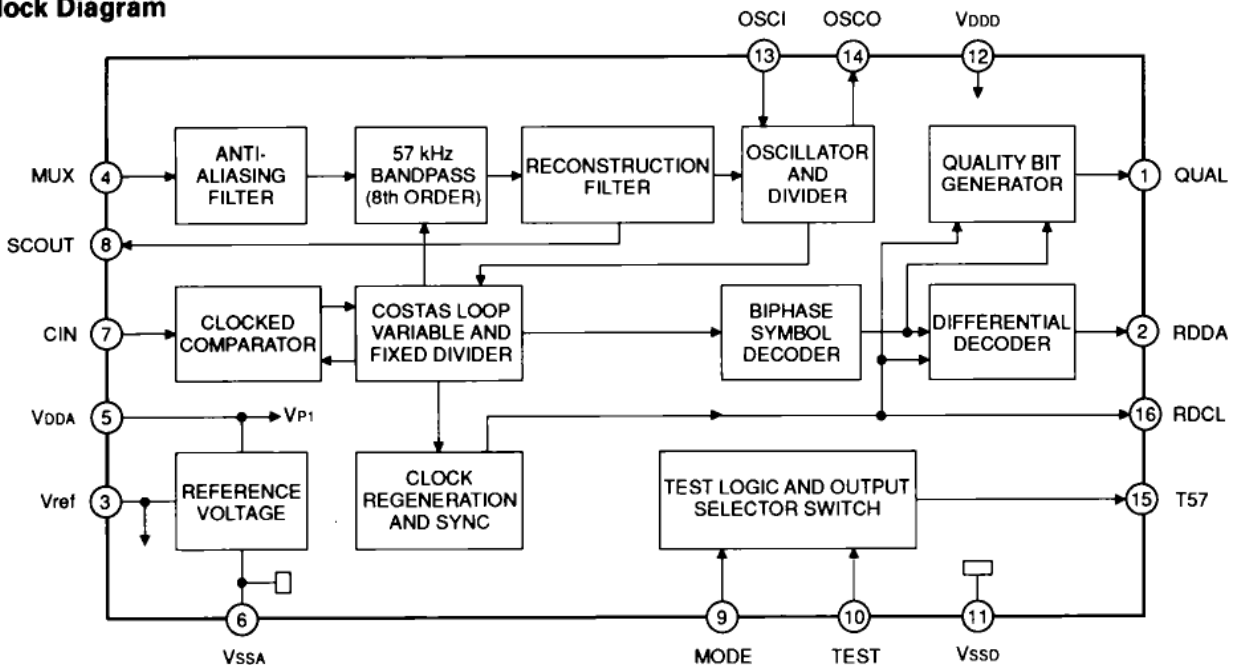


Via the pin MODE two different crystal frequencies can be used

MODE	x-tal clock
LOW	4.332 MHz
HIGH	8.664 MHz

#### ● Pin Function


Pin No.	Pin Name.	I/O	Pin Function
1	QUAL	O	Quality indication output
2	RDDA	O	RDS data output
3	Vref	–	Reference voltage output (0.5 VDDA)
4	MUX	I	Multiplex signal input
5	VDDA	–	+5 V supply voltage for analog part
6	VSSA	–	Ground for analog part (0 V)
7	CIN	I	Subcarrier input to comparator
8	SCOUT	O	Subcarrier output of reconstruction filter
9	MODE	–	Oscillator mode/test control input
10	TEST	I	Test enable input
11	VSSD	–	Ground for digital part (0 V)
12	VDDD	–	+5 V supply voltage for digital part
13	OSCI	I	Oscillator input
14	OSCO	O	Oscillator output
15	T57	O	57 kHz clock signal output
16	RDCL	O	RDS clock output

#### ● Pin Arrangement (Top View)

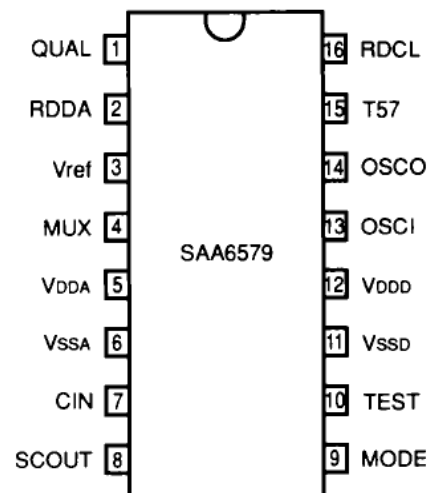

## 6. FL INFORMATION

### ■ AAV7026 (FRONT ASSY: V826)

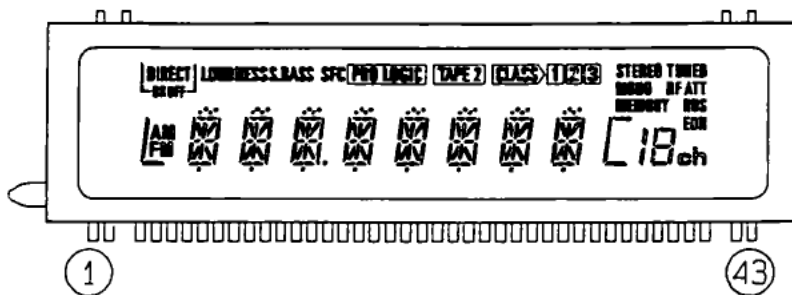




#### ● Pin Assignment

Pin No.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22
Assignment	F1	F1	NP	G1	G2	G3	G4	G5	G6	G7	G8	G9	G10	NL	NL	NL	NL	NL	NL	S21	S16	S17

Pin No.	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43
Assignment	S15	S13	S12	S14	S11	S10	S9	S8	S7	S6	S5	S3	S4	S2	S1	S18	S19	S20	NP	F2	NL

F1, F2: Filament G1~G10: Grid S1~S21: Anode NL: No Lead NP: No Pin


#### ● Grid Assignment

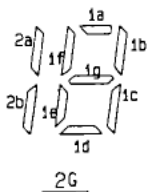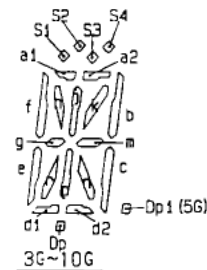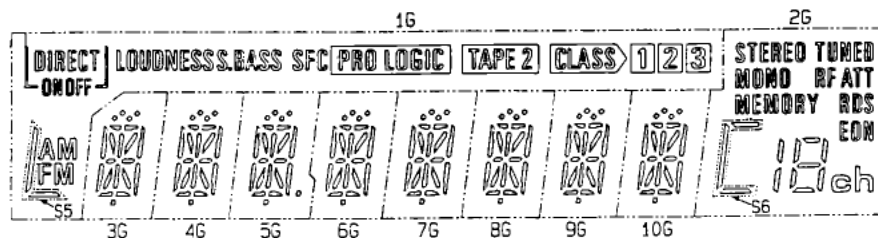


#### ● Anode Grid Assignment

	1G	2G	3G, 4G, 6G~10G	5G
S1	S5	S6	a1	a1
S2	FM	2a, 2b	a2	a2
S3	AM	1a	h	h
S4	[DIRECT]	1b	j	j
S5	ON	1c	k	k
S6	OFF	1d	b	b
S7	PRO LOGIC	1e	f	f
S8	SFC	1f	m	m
S9	LOUDNESS	1g	g	g
S10	S. BASS	ch	c	c
S11	TAPE 2	STEREO	e	e
S12	CLASS	TUNED	r	r
S13	[ ]	MONO	p	p
S14	[2]	RF ATT	n	n
S15	[3]	MEMORY	d1	d1
S16		RDS	d2	d2
S17		EON	Dp	Dp
S18			S1, S3	S1, S3
S19			S4	S4
S20			S2	S2
S21				Dp1

## 7. BLOCK DIAGRAM

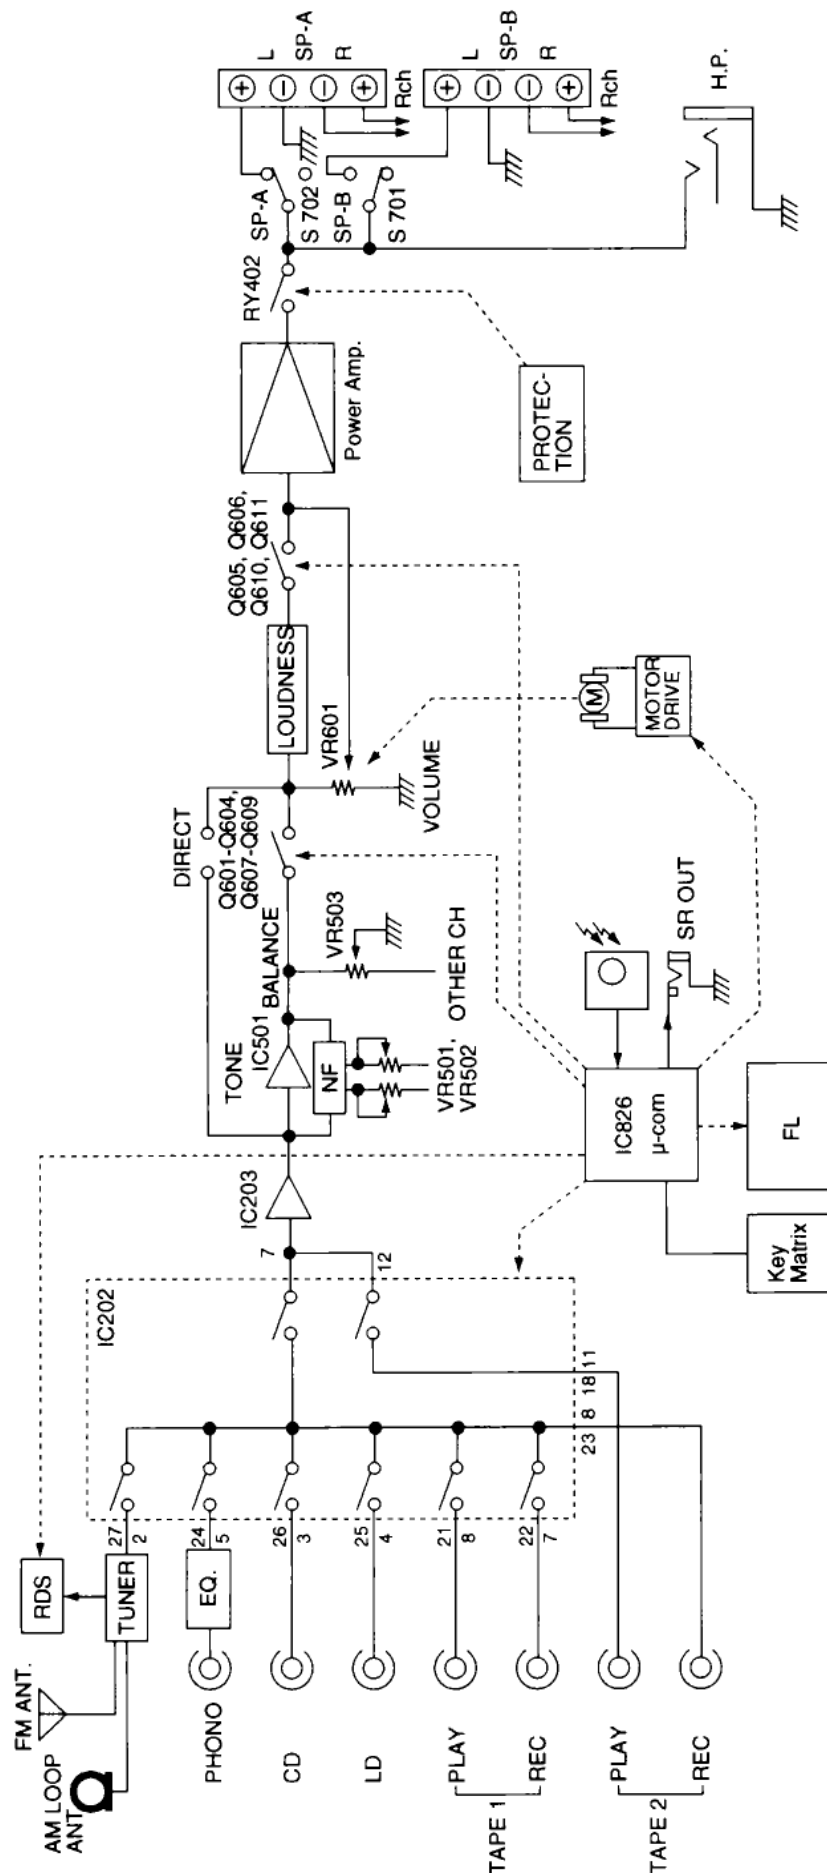

## 8. PANEL FACILITIES

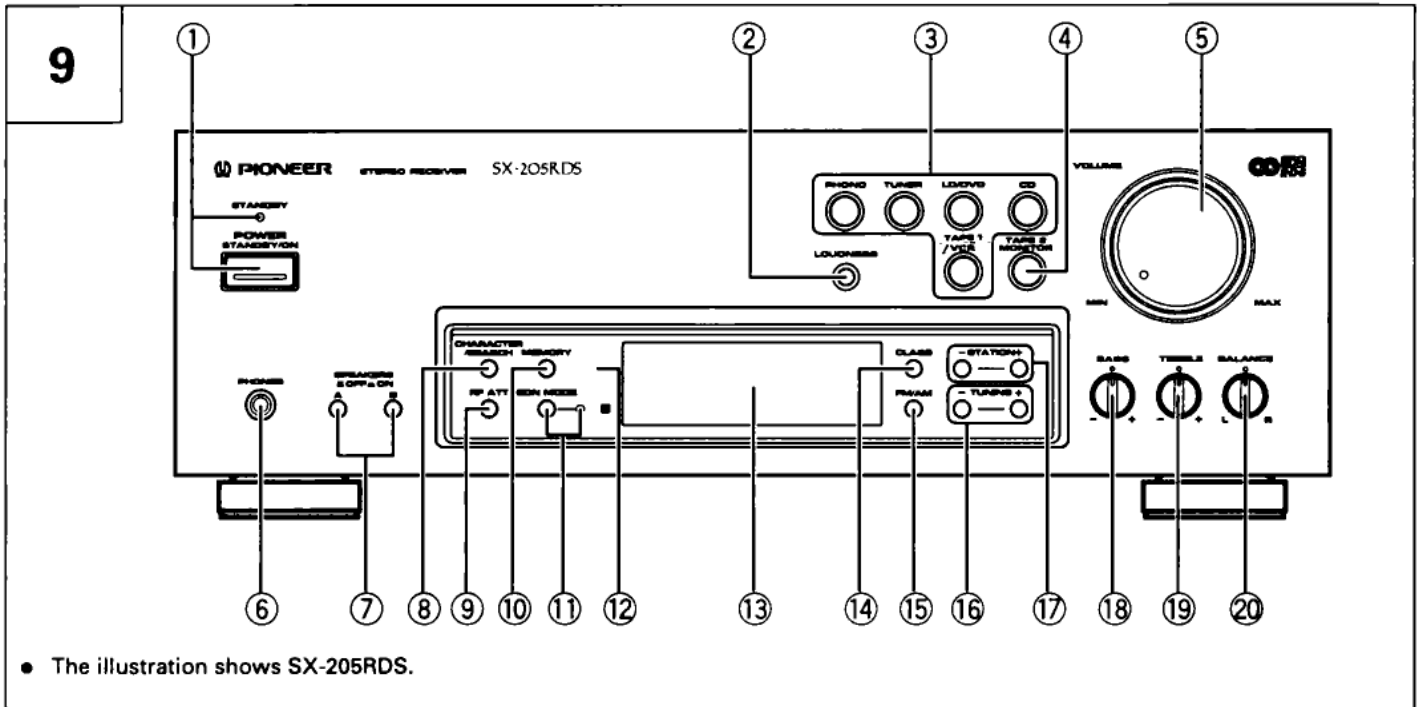

### ① POWER (STANDBY/ON) switch/STANDBY indicator

This is the switch for electric power.

**ON** : When set to the ON position, power is supplied and the unit becomes operational.

**STANDBY** : When set to the STANDBY position, STANDBY indicator lights and the main power flow is cut so the unit is no longer fully operational. A minute flow of power feeds the unit to maintain operation readiness.

- The accessory remote control unit can also be used to operate STANDBY/ON.

#### NOTE:

When the power is initially turned ON, muting will be applied to prevent sound from being output for approx. 5 seconds.

### ② LOUDNESS button

Use when listening at low volume levels.

**ON** : Boosts low and high frequencies to produce a fuller sense of sound, particularly at low volume levels.

**OFF** : Normal position.

#### NOTE:

Cannot be used when the DIRECT function is ON.

The DIRECT function can be turned ON/OFF using the remote control unit.

### ③ Function buttons

Use to select playback source.

**[PHONO]** — Press when listening to record playback on a turn table.

**[TUNER]** — Press when listening to AM or FM broadcasts with a tuner.

**[LD/DVD]** — Press when listening to LaserDiscs played back from a LD player or Digital Video Discs played back from a DVD player.

**[CD]** — Press when listening to compact disc playback with a CD player.

**[TAPE 1 /VCR]** — Press when listening to tape playback with the cassette deck 1 or a video cassette recorder.

### ④ TAPE 2 MONITOR button

Press when listening to tape playback with cassette deck 2.

### ⑤ VOLUME control

Use to adjust the volume level.

### ⑥ PHONES jack

Connect the plug on your headphones to this jack. To listen to a program through the headphones, set both SPEAKERS A and B switches to the OFF position.



# SX-305RDS, SX-205RDS

## ⑦ SPEAKERS (■ OFF, ▬ ON) buttons

These are used to select the speaker through which you wish to listen.

**A** : When the speakers connected to the A terminals are in use.

**B** : When the speakers connected to the B terminals are in use.

- Turn both A and B speakers to the OFF position when only headphones are in use.

## ⑧ CHARACTER/SEARCH button

**When receiving an AM broadcast, or when in the FM RT, FM PS modes:**

Press the button, "INPUT" is displayed, and the mode switches to manual station name input.

**When in the FM PTY mode:**

Press the button, "SEARCH" is displayed, and the mode switches to program type search.

- This button does not function when the frequency is displayed (FM broadcast only).

## ⑨ RF ATT button

Set this button to ON when receiving strong FM signals (near-by stations) to reduce sound distortion. (RF ATT indicator lights.)

Normally, this button should be set to OFF.

This button has no effect on reception of AM broadcasts.

## ⑩ MEMORY button

Pressing this button will result in the memorization of the current broadcast band, reception frequency, RF ATT (FM reception only) and FM AUTO/MONO mode.


This button is also used to select characters during station name entry and to clear memory during ERASE PI operation.

## ⑪ EON (Enhanced Other network information) MODE button/ indicator

## ⑫ Remote sensor

## ⑬ Operation display panel

- DIRECT ON/OFF indicator
- LOUDNESS indicator
- TAPE 2 monitor indicator.
- CLASS indicator
- MONO indicator
- Lights up when a stereo FM broadcast is being received.
- Lights up when a station is tuned.
- RF ATT indicator
- Lights when an RDS broadcast is received.
- Lights when a station broadcasting EON information is received.
- Frequency, function, character display
- MEMORY indicator
- Channel display

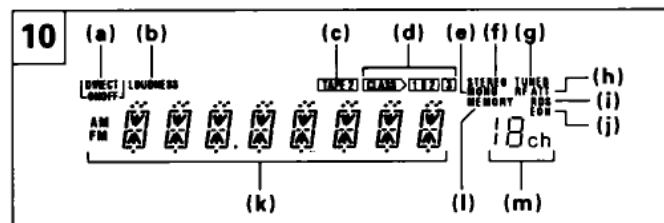

## ⑭ CLASS button

Use to switch between preset memory classes 1 to 3. In each class, one station can be memorized in each of the 1 to 10 STATION CALL buttons, enabling a total of 30 stations to be memorized.

## ⑮ FM/AM selector button

This button is used to select either AM or FM reception.

## ⑯ TUNING buttons (–, +)

Use for tuning frequencies. Press the buttons to change the frequency display (3-speed Accel Tuning) (see page 28).

In the Manual Name input mode and PTY search mode, use to select characters and program types.

## ⑰ STATION buttons (–, +)

+: Stations change in order in the upward direction.

–: Stations change in order in the downward direction.

## ⑱ BASS tone control

Use to adjust low-frequency tones. The center position is the flat (normal) position. When turned to the right, low-frequency tones are emphasized.

**NOTE:**

*This control can not be used when the DIRECT function is ON. The DIRECT function can be turned ON/OFF using the remote control unit.*

## ⑲ TREBLE tone control

Use to adjust high-frequency tones. The center position is the flat (normal) position. When turned to the right, high-frequency tones are emphasized.

**NOTE:**

*This control can not be used when the DIRECT function is ON. The DIRECT function can be turned ON/OFF using the remote control unit.*

## ⑳ BALANCE control

Should normally be left in the center position. Adjust balance if the sound is louder from one of the speakers. If the right side is louder, turn toward the L position and if the left side is louder, turn toward the R position.

**NOTE:**

*This control can not be used when the DIRECT function is ON. The DIRECT function can be turned ON/OFF using the remote control unit.*

## 9. SPECIFICATIONS

### Amplifier Section

#### Continuous Power Output (DIN)\*

(SX-305RDS) 1 kHz, T.H.D. 1 %, 4  $\Omega$  ..... 85 W + 85 W

(SX-205RDS) 1 kHz, T.H.D. 1 %, 4  $\Omega$  ..... 50 W + 50 W

#### Continuous Power Output (both channels driven)\* \*\*

(SX-305RDS) 20 Hz - 20 kHz, T.H.D. 0.09 %, 8  $\Omega$  ..... 60 W + 60 W

(SX-205RDS) 20 Hz - 20 kHz, T.H.D. 0.09 %, 8  $\Omega$  ..... 40 W + 40 W

#### Dynamic Power Output (with EIA test signal)

(SX-305RDS) 4/8  $\Omega$  ..... 100 W/80 W

(SX-205RDS) 4/8  $\Omega$  ..... 80/50 W

#### ● Above specifications are for when power supply is 230V.

#### Input (Sensitivity/Impedance)

PHONO ..... 2.5 mV/47 k $\Omega$

CD, LD/DVD, TAPE 1/VCR, TAPE 2 ..... 200 mV/22 k $\Omega$

#### Phono Overload Level (T.H.D. 0.1 %, 1 kHz)

PHONO ..... 100 mV

#### Output (Level/Impedance)

TAPE 1/VCR REC, TAPE 2 REC MONITOR ..... 200 mV/1 k $\Omega$

#### Frequency Response

PHONO (RIAA Equalization) ..... 20 Hz to 20,000 Hz  $\pm$  0.5 dB

CD, LD/DVD, TAPE 1/VCR, TAPE 2 ..... 5 Hz to 100,000 Hz  $\pm$  3 dB

#### Signal-to-Noise Ratio (DIN, continuous power/50mW)\*\*

(SX-305RDS)

PHONO ..... 67 dB/61 dB

CD, LD/DVD, TAPE 1/VCR, TAPE 2 ..... 88 dB/63 dB

(SX-205RDS)

PHONO ..... 67 dB/61 dB

CD, LD/DVD, TAPE 1/VCR, TAPE 2 ..... 82 dB/62 dB

#### Tone Control

BASS .....  $\pm$  8 dB (100 Hz)

TREBLE .....  $\pm$  8 dB (10 kHz)

LOUDNESS ..... +6 dB (100 Hz at -40 dB)

+4 dB (10 kHz at -40 dB)

### FM Tuner Section

Frequency Range ..... 87.5 MHz to 108 MHz

Usable Sensitivity ..... 14.2 dBf, IHF (1.4  $\mu$ V/75  $\Omega$ )

#### Sensitivity (DIN)

MONO ..... 1.0  $\mu$ V/75  $\Omega$

STEREO ..... 40  $\mu$ V/75  $\Omega$

#### Signal-to-Noise Ratio

MONO ..... 77 dB (at 80 dBf)

STEREO ..... 72 dB (at 80 dBf)

#### Signal-to-Noise Ratio (DIN)

MONO ..... 62 dB

STEREO ..... 58 dB

#### Distortion

STEREO ..... 0.3 % (1 kHz)

Alternate Channel Selectivity ..... 64 dB (400 kHz)

Stereo Separation ..... 40 dB (1 kHz)

Frequency Response ..... 30 Hz to 15 kHz ( $\pm$ 1 dB)

Antenna Input ..... 75  $\Omega$  unbalanced

### AM Tuner Section

Frequency Range ..... 531 kHz to 1,602 kHz

#### Sensitivity

IHF, Loop Antenna ..... 350  $\mu$ V/m

Selectivity ..... 20 dB

Signal-to-Noise Ratio ..... 50 dB

Antenna ..... AM Loop Antenna

### Miscellaneous

Power Requirements ..... a.c. 220 - 230 Volts, 50/60 Hz

Power Consumption (SX-305RDS) ..... 460 W

(SX-205RDS) ..... 370 W

Dimensions ..... 420 (W) X 140 (H) X 313 (D) mm

#### Weight (without package)

(SX-305RDS) ..... 6.5 kg

(SX-205RDS) ..... 5.4 kg

### Furnished Parts

FM Antenna ..... 1

AM Loop Antenna ..... 1

Remote Control Unit ..... 1

Dry Cell Batteries (AA/R6P) ..... 2

Operating Instructions ..... 1

### NOTE:

Specifications and design subject to possible modification without notice due to improvements.

\* Measured by audio spectrum analyzer.

\*\* Direct ON.